


Guide on Usage of Remote Controller

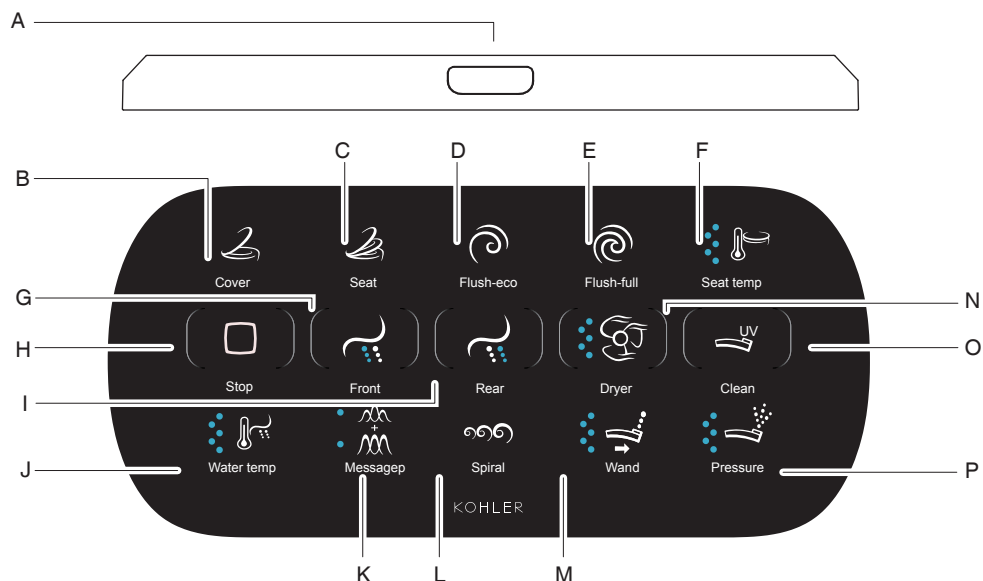

WARNING: Risk of property damage. Take down the remote control from charger before pressing Start key to prevent risk of falling.

A - Start

- Press this key to turn on the remote control. Press it again to switch on/off after start. If the toilet is not connected after start, the icon in the third row will flicker. Connecting it successfully will stop it from flickering and enter into serviceable condition.

B - Cover: Open/close cover

- Under non-seating status, press this key to open/close the cover.

C - Seat: Open/close seat

- Under non-seating status, press this key to open/close the seat.

D - Flush-eco

- Press this key to flush the toilet with a small volume of water.

E - Flush-full

- Press this key to flush the toilet with a small large volume of water.

F - Seat temp

- Press this key to adjust the desired seat temp. Adjust to 5 blue points, and the heating function for the seat will be turned off.

G - Front

- After seating, press this key to enter Front mode. After 5 minutes or so, the flush stops automatically or press the stop key to turn it off immediately.

H - Stop

- Press this key to stop the mode of Front, Rear, Dryer and Deodorization, Manual Cleaning Effuser or UV.
- Pressing this key for a long time will turn off the remote control.

I - Rear

- After sitting, press this key to enter Rear mode. After 5 minutes or so, the flush stops automatically or press the stop key to turn it off immediately.

J - Water temp

- Under Front or Rear mode, press this key to adjust gears of water temp.

K - Massage

- Under Front or Rear mode, press this key to enter the mode of mobile flushing. Press it again to enter the mode of impulse flushing. Press it at a third time, and the mode of mobile/impulse flushing will be activated at the same time. Press it at a fourth time to exit (When corresponding functions are activated, the light at the left side of icon will turn on).

L - Spiral

- During the operation under Rear mode, press this key to flush water in a spiral shape. The icon of Spiral mode flickers. Press it again to exit (or press "Stop" to turn it off). The icon of Spiral mode will then stop flickering.

Guide on Usage of Remote Controller (Cont.)

M - Wand: Effuser movement

- Under Front or Rear mode, press this key to adjust moving position of effuser.

N - Dryer

- After sitting, press it once to turn on the dryer function. Press it again to adjust dryer gears. After 4 minutes or so, it stops automatically or press the Stop key to turn it off immediately.

O - Clean: UV sterilization (UV light)

- Under non-seating status, short press this key to enter UV sterilization function. And the icon will flicker.

P - Pressure

- Under Front or Rear mode, press this key to adjust gears of water pressure.

Low Voltage Alarm



CAUTION: Risk of property damage. Please charge in time when the voltage alarm is activated.

When the  button flickers, it indicates that the built-in battery in the remote control is used up. Put the controller on the base to charge its battery.

Matching



CAUTION: Risk of property damage. Matching can be done only under non-seating status.

- When the cover is powered on normally, press the Start key at the top of the remote control. When the icon of the lowest row flickers for a long time, it means the remote control needs to be matched with the main unit.
- Long press the Dryer key. When the icon at the lowest row flickers, start the operation at the main unit end.
- Meanwhile long press the  key and  key at side keyboard. Do not release the key until hearing a short ring.
- Once the icon at the lowest row of remote control stops flickering, it means it has been matched successfully.


Communication Between Remote Control And Main Unit

- If the remote control is moved away from the sensing area, the icon at the bottom row of remote control will flicker automatically (indicating a searching the signal for the main unit). After getting back nearby the main unit, the signal will be connected automatically if the main unit is under normal power condition. Then the icon will stop flickering once it is connected successfully.

Poweroff Function

- Long press the  key at any time, the remote controller will enter Power off mode.

Guide on Setting of the Remote Control

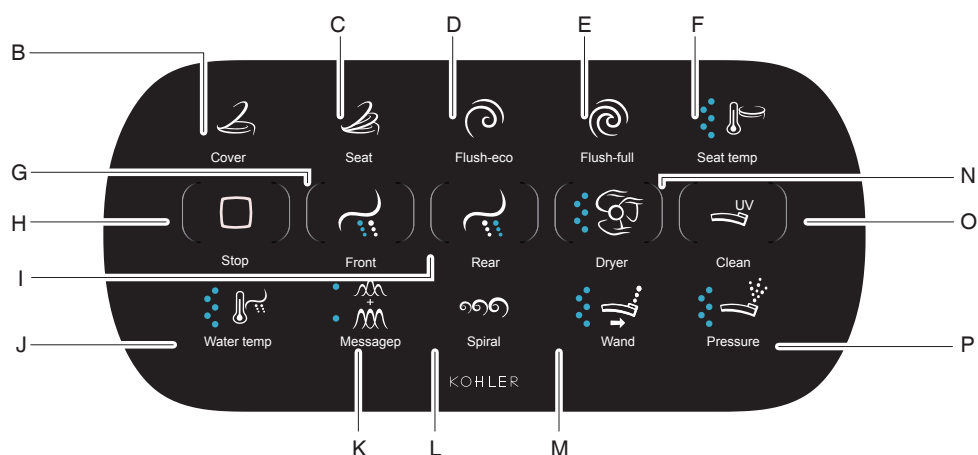

Keep pressing the  key until a short beep is heard, and release the key only after the night lamp flickers for three times. Then change the setting of B/C/E/F/M/O by the following requirements.

B - Cover: Sensing distance setting

- Long press the key to set up the sensing distance for auto cover-turning:
 1. Quick flashing of night light for one time means short-distance (short beep)
 2. Quick flashing of night light for twice means mid-distance (short beep).
 3. Quick flashing of night light for three times means long-distance (short beep).
 4. If the night light flickers slowly, turn off the auto cover-turning function (long beep).

C - Seat: Deodorization function setting

- Long press this key to turn on/off the deodorization function.
 1. Quick flashing of night light once to activate the deodorization function (short beep).
 2. Slow flashing of night light once to deactivate the deodorization function (long beep).

E - Flush-full: Automatic flushing setting

- Long press this key to turn off the function of automatic flushing. Long press it again to restore automatic flushing.
 1. Quick flashing of night light once to activate automatic flushing function (short beep).
 2. Slow flashing of night light once to deactivate automatic flushing function (long beep).

F - Seat temp: Energy saving setting

- Long press the key of Seat Temp to activate the function of energy saving. Long press it again to deactivate this function.
 1. Quick flashing of night light once to activate energy saving function (short beep).
 2. Slow flashing of night light once to deactivate energy saving function (long beep).

M -Wand: Effuser cleaning settings

- Under non-seating status, long press this key to activate the function of manual cleaning. The nozzle can be cleaned manually. Long press it again or press Stop key to deactivate this function.

When the setting of B/C/E/F/O is not modified for a certain period, repeat the process that is to keep pressing the  key until a short beep is heard and release the key only after the night lamp flickers for three times before the next change of setting.

O - Clean: Setting of UV automatic sterilization

- Long press to set up the on/off status of automatic UV sterilization.
 1. Quick flashing of night light once to activate the function of automatic UV sterilization (short beep).
 2. Slow flashing of night light once to deactivate the function of automatic UV sterilization (long beep).


Usage and Replacement of Battery for Remote Controller

- ❑ Charging block of remote controller uses 4 #5 alkaline batteries.
- ❑ When battery is low, the charging block will flicker in red lamp, hinting the user that batteries are to be replaced.



CAUTION: Risk of property damage.

- ❑ The positive and negative polarities of battery must be consistent with the mark of remote controller.
- ❑ New and old batteries shall not be mixed.
- ❑ Please use alkaline battery.

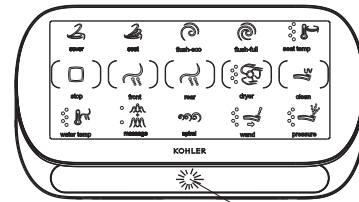


Red Lamp Flicker

Others

- ❑ Do not put the remote control at a place where it may be sprayed by liquid, or immersed in liquid.
- ❑ Do not place it near hand dryer, hair dryer and small size home appliances, to avoid disturbance of normal usage of the remote control.
- ❑ Do not apply external force to the key zone of remote controller frequently or fiercely.
- ❑ After usage of remote control, put it back into the holder mounted on wall.
- ❑ Prevent dropping the remote control during usage.
- ❑ Anti-theft function: remote controller can be locked and fixed to the base via screws. Refer to the installation instructions for detailed methods.

คำแนะนำในการใช้งานรีโมทคอนโทรล

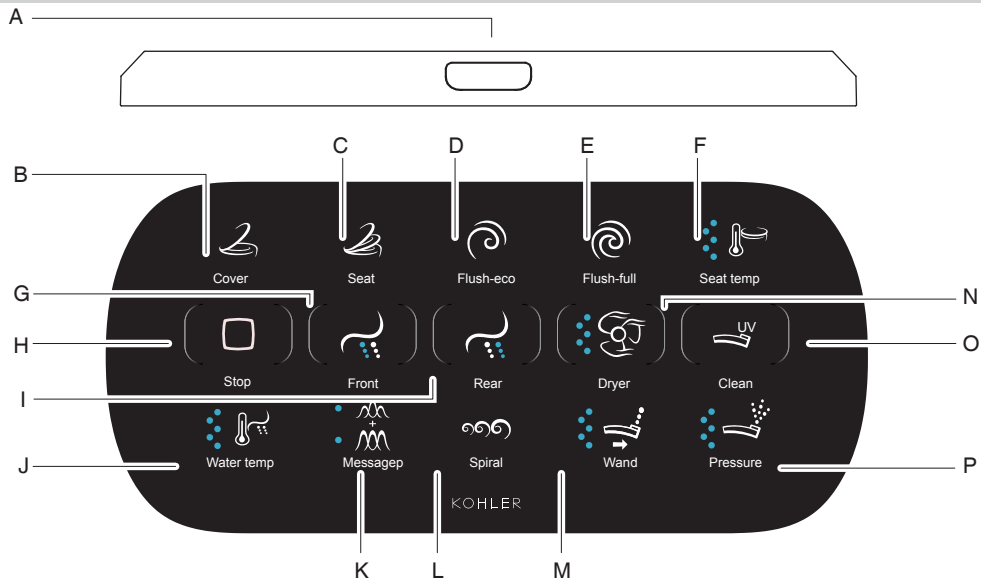

คำเตือน: ความเสี่ยงซึ่งอาจทำให้เกิดภัยพิบัติร้ายแรง นำรีโมทคอนโทรลออกจากแท่นชาร์จก่อนกดคำสั่งเริ่มต้น (Start) เพื่อป้องกันการตกหล่น

A – เริ่มต้น (Start)

- กดคำสั่งนี้เพื่อเปิดใช้งานรีโมทคอนโทรล กดอีกครั้งเพื่อเปิดหรือปิดหลังเริ่มการทำงาน หากไม่ได้เชื่อมต่อกับโถสุขภัณฑ์หลังจากเริ่มทำงานแล้ว โถคอนแทกที่สามจะกะพริบ และจะหยุดกะพริบ เมื่อการเชื่อมต่อสำเร็จ และเข้าสู่สภาวะพร้อมใช้งาน

B – เปิด/ปิดฝารองนั่ง (Cover)

- กดคำสั่งเปิด/ปิดฝารองนั่ง เมื่อไม่มีการใช้งานที่รองนั่ง

C – เปิด/ปิดที่รองนั่ง (Seat)

- กดคำสั่งเปิด/ปิดที่รองนั่ง เมื่อไม่มีการใช้งานที่รองนั่ง

D – ชำระล้างแบบประหยัด (Flush-eco)

- กดคำสั่งนี้เพื่อใช้ปริมาณน้ำน้อยในการชำระล้างโถสุขภัณฑ์

E – ชำระล้างแบบปกติ (Flush-full)

- กดคำสั่งนี้เพื่อใช้ปริมาณน้ำปกติในการชำระล้างโถสุขภัณฑ์

F – อุณหภูมิที่รองนั่ง (Seat temp)

- กดคำสั่งนี้เพื่อปรับอุณหภูมิที่รองนั่งตามต้องการ สามารถปรับอุณหภูมิได้ 5 ระดับ โดยหน้าจอจะแสดงไฟสีฟ้า 5 จุด เมื่อกดปรับระดับให้ไฟหายไปจะเป็นการปิดฟังก์ชัน

G – ชำระส่วนหน้า (Front)

- กดคำสั่งนี้เมื่อนั่งบนที่รองนั่งเพื่อเข้าโหมดชำระส่วนหน้า เมื่อฟังก์ชันทำงานต่อเนื่องเป็นเวลา 5 นาทีการชำระจะหยุดทำงานอัตโนมัติ หรือกดคำสั่งหยุดการทำงานเพื่อปิดการทำงานทันที

H – หยุดการทำงาน (Stop)

- กดคำสั่งนี้เพื่อหยุดการทำงานของโหมดชำระส่วนหน้า, ชำระส่วนหลัง, ระบบเป่าแห้งและระบบดับกลิ่น, การทำความสะอาดก้นฉีดชำระแบบแมนนวล หรือระบบทำความสะอาดด้วยแสงยูวี
- กดคำสั่งนี้จะเป็นคำสั่งปิดการใช้รีโมทคอนโทรล

I – ชำระส่วนหลัง (Rear)

- กดคำสั่งนี้เมื่อนั่งบนที่รองนั่งเพื่อเข้าโหมดชำระส่วนหลัง เมื่อฟังก์ชันทำงานต่อเนื่องเป็นเวลา 5 นาที การชำระส่วนหลังจะหยุดทำงานอัตโนมัติ หรือกดคำสั่งหยุดการทำงานเพื่อปิดการทำงานทันที

J – อุณหภูมิน้ำ (Water temp)

- ภายใต้การทำงานคำสั่งโหมดชำระส่วนหน้าหรือชำระส่วนหลัง ใช้คำสั่งนี้เพื่อปรับอุณหภูมิน้ำ

ข้อสำคัญเกี่ยวกับความปลอดภัย (ต่อ)

K – การนวดด้วยสายนํ้า (Massage)

- ภายใต้การทำงานคำสั่งโหมดชำระส่วนหน้าหรือชำระส่วนหลัง ใช้คำสั่งนี้เพื่อเข้าสู่โหมดการชำระแบบเคลื่อนที่ (mobile flushing) กดอีกครั้งเพื่อเข้าสู่โหมดชำระแบบเป็นจังหวะ (impulse flushing) เมื่อกดครั้งที่สาม โหมดการทำงานชำระแบบเคลื่อนที่และแบบเป็นจังหวะ (mobile/impulse flushing) จะทำงานร่วมกัน (เมื่อฟังก์ชันทำงานร่วมกัน ไฟทางด้านซ้ายของไอคอนจะเปิด) กดครั้งที่สี่เพื่อออกจากคำสั่ง

L – สายน้ำแบบเกลียว (Spiral)

- กดคำสั่งนี้เพื่อปรับรูปแบบสายน้ำในระหว่างการทำงานของโหมดชำระส่วนหลัง ไอคอนสายน้ำแบบเกลียวจะกะพริบ กดอีกครั้งเพื่อออกจากคำสั่ง (หรือกด “หยุดการทำงาน” เพื่อปิดคำสั่ง) ไอคอนสายน้ำแบบเกลียวจะหยุดกะพริบเมื่อไม่มีการใช้งาน

M – ขยับก้านฉีดชำระ (Wand)

- ภายใต้การใช้งานคำสั่งโหมดชำระส่วนหน้าหรือชำระส่วนหลัง ใช้คำสั่งนี้เพื่อปรับตำแหน่งการเคลื่อนไหวของก้านฉีดชำระ

N – ระบบเป่าแห้ง (Dryer)

- กดคำสั่งนี้เพียงครั้งเดียวเพื่อเปิดฟังก์ชันระบบเป่าแห้งเมื่อนั่งบนที่รองนั่ง กดอีกครั้งเพื่อปรับระดับเป่าลม เมื่อฟังก์ชันทำงานต่อเนื่อง เป็นเวลาประมาณ 4 นาที ฟังก์ชันจะหยุดทำงานอัตโนมัติ หรือกดคำสั่งหยุดการทำงานเพื่อปิดทันที

O – ระบบฆ่าเชื้อด้วยแสง UV (Clean)

- กดคำสั่งนี้เพื่อเข้าสู่ระบบฆ่าเชื้อด้วยแสง UV อัตโนมัติ เมื่อไม่มีการใช้งานที่รองนั่ง ไอคอนจะกะพริบเมื่อฟังก์ชันทำงาน

P – แรงดันน้ำ (Pressure)

- ภายใต้การใช้งานคำสั่งโหมดชำระส่วนหน้าหรือชำระส่วนหลัง ใช้คำสั่งนี้เพื่อปรับแรงดันน้ำ

การเตือนกำลังไฟฟ้าอ่อน



ข้อควรระวัง: ความเสี่ยงซึ่งอาจทำให้เกิดอันตราย โปรดจำไว้ว่ารिमोटคอนโทรลทันทีเมื่อมีการเตือนกำลังไฟฟ้าอ่อน

เมื่อไอคอนหยุดการทำงาน  กะพริบแสดงว่าแบตเตอรี่ในรีโมทคอนโทรลหมดกำลังไฟ นำรีโมทคอนโทรลวางบนแท่นวางเพื่อชาร์จแบตเตอรี่

การจับคู่



ข้อควรระวัง: ความเสี่ยงซึ่งอาจทำให้เกิดอันตราย การจับคู่สามารถทำได้เมื่อไม่มีการใช้งานที่รองนั่ง

- เมื่อฝาครอบนั่งเปิดใช้งานปกติ กดคำสั่งเริ่มต้นที่อยู่ด้านบนของรีโมทคอนโทรลค้างเอาไว้เพื่อเปิดใช้งานรีโมทคอนโทรล เมื่อไอคอนแถวล่างสุด กะพริบหมายถึงรีโมทคอนโทรลยังไม่ได้จับคู่กับโถสุขภัณฑ์
- กดค้างที่คำสั่งระบบเป่าแห้ง เมื่อโถสุขภัณฑ์เริ่มทำการประมวลผล ไอคอนคำสั่งแถวล่างสุดจะกะพริบ
- กดค้างที่คำสั่งชำระส่วนหน้า  และชำระส่วนหลัง  พร้อมกัน อย่าปล่อยจนกว่าจะได้ยินเสียงดังปิ๊บสั้นๆ
- เมื่อไอคอนแถวล่างสุดของรีโมทคอนโทรลหยุดกะพริบหมายถึงการจับคู่สำเร็จ


การสื่อสารระหว่างรีโมทคอนโทรลกับโถสุขภัณฑ์

- เมื่อย้ายรีโมทคอนโทรลห่างจากบริเวณตรวจจับสัญญาณ ไอคอนแถวล่างของรีโมทคอนโทรลจะกะพริบโดยอัตโนมัติ (แสดงถึงการค้นหาสัญญาณของโถสุขภัณฑ์) สัญญาณจะเชื่อมต่ออัตโนมัติเมื่อรีโมทคอนโทรลอยู่ในระยะใกล้กับผลิตภัณฑ์ และไอคอนจะหยุดกะพริบเมื่อการเชื่อมต่อสำเร็จ

ฟังก์ชันปิดการใช้งาน

- กดค้างที่คำสั่ง หยุดการทำงาน  รีโมทคอนโทรลจะเข้าสู่โหมดปิดการทำงาน

คำแนะนำในการตั้งค่ารีโมทคอนโทรล

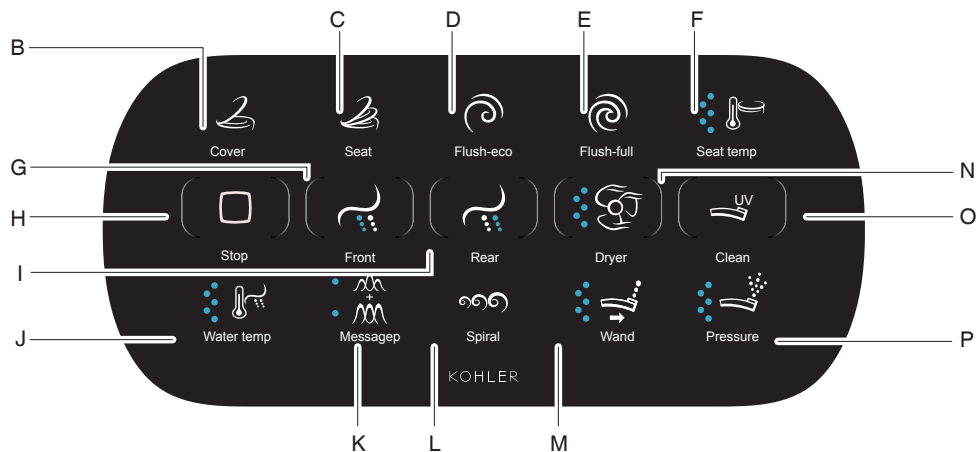

กดค้างที่ ☀ กระทั่งได้ยินเสียงบี๊บสั้นๆ แล้วปล่อยมือแสงไฟกลางคั่นกะพริบสามครั้ง แล้วจึงเปลี่ยนการตั้งค่าของคำสั่ง B/C/E/F/M/O ตามต้องการ

B – เปิด/ปิดฝารองนั่ง (Cover) : ตั้งค่าระยะการตรวจจับ

- กดค้างที่คำสั่งเพื่อตั้งค่าระยะการตรวจจับการพลิกเปิด/ปิดฝารองนั่งอัตโนมัติ:
 1. แสงไฟกลางคั่นกะพริบสั้นๆ หนึ่งครั้ง หมายถึงระยะใกล้ (เสียงบี๊บสั้น)
 2. แสงไฟกลางคั่นกะพริบสั้นๆ สองครั้ง หมายถึงระยะปานกลาง (เสียงบี๊บสั้น)
 3. แสงไฟกลางคั่นกะพริบสั้นๆ สามครั้ง หมายถึงระยะไกล (เสียงบี๊บสั้น)
 4. ถ้าแสงไฟกลางคั่นกะพริบช้าๆ หมายถึงการปิดฟังก์ชันเปิด/ปิดฝารองนั่งอัตโนมัติ (เสียงบี๊ปปยาว)

C – เปิด/ปิดที่รองนั่ง (Seat) : ตั้งค่าฟังก์ชันการกำจัดกลิ่น

- กดค้างที่คำสั่งเพื่อทำการเปิด/ปิดฟังก์ชันการกำจัดกลิ่น
 1. แสงไฟกลางคั่นกะพริบเร็วหนึ่งครั้ง เมื่อมีการทำงานของฟังก์ชันการกำจัดกลิ่น (เสียงบี๊บสั้น)
 2. แสงไฟกลางคั่นกะพริบช้าหนึ่งครั้ง เมื่อไม่มีการทำงานของฟังก์ชันการกำจัดกลิ่น (เสียงบี๊ปปยาว)

E – ชำระล้างแบบปกติ (Flush-full) : ตั้งค่าการชำระล้างอัตโนมัติ

- กดค้างที่คำสั่งเพื่อปิดฟังก์ชันการชำระล้างอัตโนมัติ กดค้างอีกครั้งเพื่อเปิดการทำงานฟังก์ชัน
 1. แสงไฟกลางคั่นกะพริบเร็วหนึ่งครั้ง เมื่อมีการทำงานของฟังก์ชันการชำระล้างอัตโนมัติ (เสียงบี๊บสั้น)
 2. แสงไฟกลางคั่นกะพริบช้าหนึ่งครั้ง เมื่อไม่มีการทำงานของฟังก์ชันการชำระล้างอัตโนมัติ (เสียงบี๊ปปยาว)

F – อุณหภูมิที่รองนั่ง (Seat temp : ตั้งค่าระบบประหยัดพลังงาน

- กดค้างที่คำสั่งอุณหภูมิที่รองนั่งเพื่อเปิดระบบประหยัดพลังงานของสุขภัณฑ์ กดค้างอีกครั้งเพื่อปิดฟังก์ชันนี้
 1. แสงไฟกลางคั่นกะพริบเร็วหนึ่งครั้ง เมื่อมีการทำงานของระบบประหยัดพลังงานของสุขภัณฑ์ (เสียงบี๊บสั้น)
 2. แสงไฟกลางคั่นกะพริบช้าหนึ่งครั้ง เมื่อไม่มีการทำงานของระบบประหยัดพลังงานของสุขภัณฑ์ (เสียงบี๊ปปยาว)

M – ขยับกันฉีดชำระ : ตั้งค่าการทำความสะอาดกันฉีดชำระ

- กดค้างคำสั่งนี้ เมื่อไม่มีการใช้งานที่รองนั่งเพื่อเปิดการทำงานฟังก์ชันทำความสะอาดกันฉีดชำระแบบแมนนวล กันฉีดชำระสามารถทำความสะอาดด้วยวิธีแมนนวล กดค้างอีกครั้งหรือกดคำสั่งหยุดการทำงานเพื่อปิดการทำงานฟังก์ชันนี้

หลังจากปรับค่าฟังก์ชัน B/C/E/F/O รอสักครู่ แล้วจึงกด ☀ ค้างจนได้ยินเสียงบี๊บสั้นๆ แล้วปล่อยหลังจากแสงไฟกลางคั่นกะพริบสามครั้ง ก่อนการเปลี่ยนการตั้งค่าต่อไป

O – ระบบฆ่าเชื้อด้วยแสงUV (Clean) : ตั้งค่าระบบฆ่าเชื้อด้วยแสงUVอัตโนมัติ

- กดค้างเพื่อตั้งค่าเปิด/ปิดระบบฆ่าเชื้อด้วยแสงยูวีอัตโนมัติ
 1. แสงไฟกลางคั่นกะพริบเร็วหนึ่งครั้ง เมื่อมีการทำงานของระบบฆ่าเชื้อด้วยแสง UV อัตโนมัติ (เสียงบี๊บสั้น)
 2. แสงไฟกลางคั่นกะพริบช้าหนึ่งครั้ง เมื่อไม่มีการทำงานของระบบฆ่าเชื้อด้วยแสง UV อัตโนมัติ (เสียงบี๊ปปยาว)


การใช้งานและการเปลี่ยนแบตเตอรี่สำหรับรีโมทคอนโทรล

- แท่นชาร์จรีโมทคอนโทรลใช้ถ่านอัลคาไลน์ 4 ก้อน
- เมื่อแบตเตอรี่อ่อน ไฟแดงที่แท่นชาร์จจะกะพริบเป็นสัญญาณเตือนให้ผู้เปลี่ยนแบตเตอรี่



ข้อควรระวัง: ความเสี่ยงซึ่งอาจทำให้เกิดภัยพิบัติ

- ขั้วบวกขั้วลบของแบตเตอรี่ต้องตรงตามตำแหน่งที่ระบุไว้ในรีโมทคอนโทรล
- ไม่ควรใช้แบตเตอรี่เก่าร่วมกับแบตเตอรี่ใหม่
- โปรดใช้ถ่านอัลคาไลน์

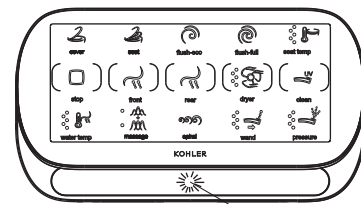

ไฟสีแดงกะพริบ

อื่นๆ

- อย่าวางรีโมทคอนโทรลในพื้นที่เปียกชื้นหรือน้ำกระเซ็นถึง
- อย่าวางใกล้เครื่องเป่าลมร้อน, ไดร์เป่าผม หรือเครื่องใช้ภายในบ้านขนาดเล็ก เพื่อไม่ให้เกิดการรบกวนการใช้งานปกติของรีโมทคอนโทรล
- อย่าใช้อุปกรณ์อื่นๆ เคาะหรือกระแทกบริเวณปุ่มคำสั่ง
- หลังการใช้งานรีโมทคอนโทรล โปรดวางรีโมทคอนโทรลบนแท่นชาร์จบนผนัง
- ระวังรีโมทคอนโทรลตกลงระหว่างการใช้งาน
- ฟังก์ชันป้องกันการขโมยเมื่อติดตั้งในที่สาธารณะ: สามารถใช้รีโมทคอนโทรลกับแท่นวาง อ่างอิงคู่มือแนะนำการติดตั้งสำหรับรายละเอียดวิธีการติดตั้ง