

Quick Guide for Remote Control

- For details please refer to User Manual

Manual flush key

The toilet will be flushed each time this key is pressed

Preset Key

Store or use previous stored settings. (See User Manual, page 28)

Wake up key

If the LCD panel is no display and the touch key has no response, please press this key.

Stop key

Pushing this key to stop front flushing, rear flushing and dryer function.

Selection key

To adjust water temperature, spraying pressure, position or dry temperature under front washing, rear washing or dryer mode; or, to select options or set parameters when setting menus.

Menu key

Pressing this key to enter into menu setting function, by which we can change settings such as seat temperature, energy saving, night lighting, auto open/close settings, flushing and clock. (See User Manual, page 21)

Clock display

If it displays as "--:--", it indicates the clock has not be set, please set it. (See User Manual, page 24)

Selection box

Under front washing, rear washing and dryer mode, these arrows can be used to adjust selected parameters.

Temperature

To display current water, dry and seat temperature

Pressure

To display water flow pressure under washing mode



Seat/cover opening key

Pressing this key, the cover and seat will be opened at the same time.

Open cover/close seat key

pressing this key to open cover or close seat.

Cover close key

Pressing this key to close cover and seat.

Front washing key

Pressing this key to start front washing function, which will be stopped 5 minutes later or when the Stop key is pressed. (See User Manual, page 18)

Rear washing key

Pressing this key to start rear washing function, which will be stopped 5 minutes later or when the Stop key is pressed. (See User Manual, page 17)

Oscillate key


Pressing this key to start oscillate washing function as front or rear washing function is activated, this function will be shutdown with the key being pressed again. (See User Manual, page 19)

Dryer key

Pressing this key to start dryer function, which will be stopped 4 minutes later or when the Stop key is pressed. (See User Manual, page 20)

Deodorizer key

Pressing this key to open/close deodorizer function. (See User Manual, page 20)

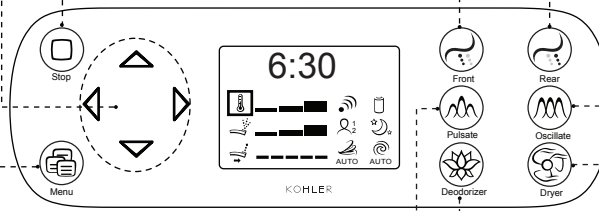

Pulsate key

Pressing this key to start pulsate function as front or rear washing function is activated, this function will be shutdown with the key being pressed again. (See User Manual, page 19)

Infrared sending display

This icon will flash 2 times when sending infrared signals.

Battery Low display

When this icon is indicated, please replace remote control batteries immediately (see User Manual, page 30)

Preset

This icon will be indicated when using preset parameters. (See User Manual, page 28)

Energy saving


This icon will be indicated under energy saving mode. (See User Manual, page 22)

Auto flushing

This icon will be indicated under auto flushing mode. (See User Manual, page 26)

Auto open/close

This icon will be indicated under auto open/close mode. (See User Manual, page 25)

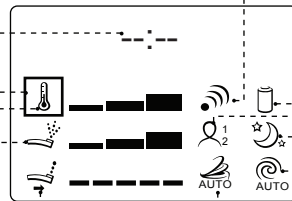

Position

To display current parameters for the washing position of water spray

• Front washing Function

Push the front washing key to startup this function. Water temperature, flushing intensity and position can be adjusted with Selection keys.

• Rear washing function

Push the rear washing key to startup this function. Water temperature, flushing intensity and position can be adjusted with Selection keys.

• Dryer Function

Push Dryer key to startup this function. Air temperature can be adjusted with Selection keys.

Q&A

Q : Several minutes after being used, the remote control has no display and keys on the panel all have no response, why?

A : If no any key is pressed within 3 minutes (6 minutes under washing mode and 5 minutes under dryer mode), the controller will enter into energy saving mode and it will be activated with pressing the key WAKE UP.

Q : On the remote control, proper key is pressed and there is corresponding display on the remote control, however, the bidet has no any response, why?

A : Make sure the bidet had been supplied with power and if the bidet had been powered on.

Q : Front washing, rear washing, dryer or deodorizer key is pressed and there is display on the remote control, the bidet has sound but no action, why?

A : Have you sit on the seating? These functions will not be activated until you sit on the toilet seat.

Q : I pressed some key on the panel, however, the display has no any response and only the backlight is lit, why?

A : In order to avoid accidental operation, when the LCD is off, pressing touch keys will only lighten the backlight. Only when the backlight is on, corresponding function will be executed after touch keys is pressed.

ข้อแนะนำการใช้รีโมท

- โปรดอ่านรายละเอียดในคู่มือแนะนำการใช้งาน

ปุ่มคำสั่งชำระ

กดปุ่มนี้ สุขภัณฑ์จะชำระล้างทุกครั้งเมื่อกดปุ่มนี้

ปุ่มคำสั่งตั้งค่า

กดปุ่มนี้ สุขภัณฑ์จะกลับไปยังค่าที่ตั้งไว้ก่อนหน้านี้ (รายละเอียดตามคู่มือการใช้งาน หน้า 71)

ปุ่มคำสั่งกลับเข้าสู่การทำงาน

เมื่อจอแสดงผลไม่ทำงานและปุ่มอื่นๆไม่สามารถทำงานตามปกติ ให้กดปุ่มนี้เพื่อกลับเข้าสู่การทำงาน

ปุ่มคำสั่งหยุด

กดปุ่มนี้ สุขภัณฑ์จะหยุดการชำระที่ด้านหน้า ด้านหลัง และระบบเป่าแห้ง

ปุ่มคำสั่งเลือกการทำงาน

สำหรับการปรับอุณหภูมิ, ความแรง, ตำแหน่งของน้ำ หรืออุณหภูมิระบบเป่าแห้ง ในขั้นตอนชำระที่ด้านหน้า, ด้านหลัง, หรือระบบเป่าแห้ง หรือเลือกคำสั่งเพื่อตั้งค่าการทำงานของสุขภัณฑ์

ปุ่มคำสั่งเมนู

กดปุ่มนี้เพื่อตั้งฟังก์ชันการทำงาน โดยผู้ใช้งานสามารถตั้งค่าต่างๆได้ เช่น อุณหภูมิของที่รองนั่ง, ประหยัดพลังงาน, ไฟกลางคืน ตั้งเปิด-ปิดอัตโนมัติ, การชำระ และ นาฬิกา (รายละเอียดตามคู่มือการใช้งาน หน้า 64)

แสดงเวลา

หน้าจอแสดงผล " --- " แสดงว่ายังไม่ได้ตั้งเวลา โปรดทำการตั้งเวลา (รายละเอียดตามคู่มือการใช้งาน หน้า 67)

กล่องเลือกคำสั่ง

ขณะที่สุขภัณฑ์กำลังชำระที่ด้านหน้า ด้านหลัง และเป่าแห้ง เราสามารถใช้ลูกศรซ้าย-ขวา < > เพื่อปรับค่า

แสดงอุณหภูมิ

แสดงอุณหภูมิที่น้ำ อุณหภูมิของระบบเป่าแห้งและที่รองนั่ง

แสดงความเร็วของน้ำ

แสดงความเร็วของน้ำขณะชำระ

ปุ่มคำสั่งชำระด้านหน้า

กดปุ่มนี้ สุขภัณฑ์จะทำการชำระที่ด้านหน้า และหยุดภายใน 5 นาที หรือหยุดเมื่อกดซ้ำอีกครั้งหนึ่ง (รายละเอียดตามคู่มือการใช้งาน หน้า 61)

ปุ่มคำสั่งฉีดพ่นเป็นจังหวะ

กดปุ่มนี้เพื่อนำชำระล้างที่ด้านหน้า, ด้านหลังพุ่งออกมาเป็นจังหวะ และจะหยุดเมื่อกดซ้ำอีกครั้ง (รายละเอียดตามคู่มือการใช้งาน หน้า 62)

ปุ่มคำสั่งเปิดที่รองนั่ง/ฝารองนั่ง

กดปุ่มนี้ ที่รองนั่งและฝารองนั่งจะเปิดพร้อมกัน

ปุ่มคำสั่งเปิดเฉพาะฝารองนั่ง

กดปุ่มนี้เพื่อเปิดฝารองนั่ง

ปุ่มคำสั่งปิดฝารองนั่ง

กดปุ่มนี้เพื่อปิดฝารองนั่ง

ปุ่มคำสั่งชำระด้านหลัง

กดปุ่มนี้ สุขภัณฑ์จะทำการชำระล้างที่ด้านหลัง และจะหยุดภายใน 5 นาที หรือหยุดเมื่อกดซ้ำอีกครั้งหนึ่ง (รายละเอียดตามคู่มือการใช้งาน หน้า 60)

ปุ่มคำสั่งฉีดพ่นหน้า-หลัง



กดปุ่มนี้เพื่อนำชำระล้างที่ด้านหน้าหรือด้านหลัง โดยที่น้ำฉีดเคลื่อนที่ที่หน้า-หลัง และจะหยุดเมื่อกดซ้ำอีกครั้ง (รายละเอียดตามคู่มือการใช้งาน หน้า 62)

ปุ่มคำสั่งเป่าแห้ง

กดปุ่มนี้เพื่อเป่าแห้ง จะหยุดภายใน 4 นาที หรือกดซ้ำอีกครั้งหนึ่ง (รายละเอียดตามคู่มือการใช้งาน หน้า 63)

ปุ่มคำสั่งดับกลิ่น

กดปุ่มนี้เพื่อเปิด-ปิด น้ำยาดับกลิ่น (รายละเอียดตามคู่มือการใช้งาน หน้า 63)

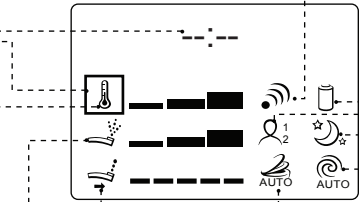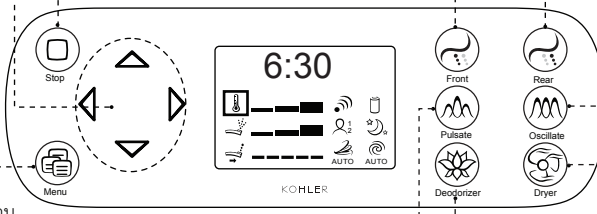

แสดงตำแหน่งชำระ
แสดงตำแหน่งของก้านชำระ

แสดงแบตเตอรี่อ่อน

เมื่อไอคอนปรากฏแสดงว่าแบตเตอรี่อ่อน ให้ทำการเปลี่ยนแบตเตอรี่ (รายละเอียดตามคู่มือการใช้งาน หน้า 73)

แสดงการตั้งค่า

จะปรากฏไอคอนระหว่างการใช้งานส่วนบุคคล (รายละเอียดตามคู่มือการใช้งาน หน้า 71)

แสดงการประหยัดพลังงาน

จะแสดงเมื่ออยู่ในประหยัดพลังงาน (รายละเอียดตามคู่มือการใช้งาน หน้า 65)

แสดงการชำระอัตโนมัติ

จะปรากฏไอคอนนี้เมื่อมีการใช้ระบบชำระอัตโนมัติ (รายละเอียดตามคู่มือการใช้งาน หน้า 69)

แสดงการเปิด-ปิดฝารองนั่งอัตโนมัติ

จะปรากฏไอคอนนี้เมื่อมีการใช้ระบบเปิด-ปิด ฝารองนั่งอัตโนมัติ (รายละเอียดตามคู่มือการใช้งาน หน้า 68)

- การชำระด้านหน้า
เมื่อกดปุ่มคำสั่งชำระด้านหน้า เราสามารถปรับอุณหภูมิ ความแรง และตำแหน่งของน้ำ โดยใช้กล่องเลือกคำสั่ง
- การชำระด้านหลัง
เมื่อกดปุ่มคำสั่งชำระด้านหลัง เราสามารถปรับอุณหภูมิ ความแรง และตำแหน่งของน้ำ โดยใช้กล่องเลือกคำสั่ง
- การเป่าแห้ง
เมื่อกดปุ่มคำสั่งเป่าแห้ง เราสามารถปรับอุณหภูมิ โดยใช้กล่องเลือกคำสั่ง

ถาม & ตอบ

- ถาม: เมื่อใช้งานนานหลายนาที รีโมทไม่แสดงผล และปุ่มกดไม่สามารถใช้งานได้ สาเหตุเกิดจากอะไร
 ตอบ: เมื่อไม่มีการกดปุ่มภายใน 3 นาที (6 นาที สำหรับชำระ, 5 นาที สำหรับระบบเป่าแห้ง) รีโมทและจอแสดงผลจะดับลงเพื่อประหยัดพลังงาน และจะกลับมาทำงานอีกครั้งหนึ่งเมื่อกดปุ่มกลับเข้าสู่การทำงาน
- ถาม: เมื่อกดรีโมท จอแสดงผลทำงาน แต่ฝารองนั่งไม่มีการตอบสนอง สาเหตุเกิดจากอะไร
 ตอบ: ให้ตรวจสอบว่าสุขภัณฑ์ได้ต่อกับระบบไฟฟ้าหรือไม่
- ถาม: เมื่อกดปุ่มชำระที่ด้านหน้า ด้านหลัง ระบบเป่าแห้ง หรือน้ำยาดับกลิ่น และได้แสดงผลบนจอ แต่สุขภัณฑ์ไม่มีการตอบสนอง สาเหตุเกิดจากอะไร
 ตอบ: สุขภัณฑ์จะทำงานก็ต่อเมื่อเรานั่งอยู่บนฝารองนั่ง
- ถาม: เมื่อกดปุ่มกดบางปุ่ม แต่จอแสดงผลไม่ทำงาน มีเพียงสัญญาณไฟเท่านั้น สาเหตุเกิดจากอะไร
 ตอบ: เพื่อป้องกันการทำงานผิดพลาด เมื่อจอแสดงผลดับลง แล้วกดปุ่มกด จอจะแสดงแค่สัญญาณไฟเท่านั้น เมื่อสัญญาณไฟติดขึ้น คำสั่งต่างๆจะแสดงผลออกมาเมื่อกดปุ่มกดอีกครั้ง