

KOHLER®

SERVICE KIT INSTRUCTIONS

FLUSH VALVE KIT

PURPOSE

Use this service Kit to replace the flush valve assembly of your Kohler toilet




INSTALLATION

1. Shut off the water supply to the toilet, and completely drain the tank.
2. Check if old valve has a water line mark, if not check the inner wall of the tank. Mark the water line on the old flush valve.
3. Remove the tank nuts and washers, and lift the tank of the toilet.
4. Remove the tank bolts, and save them for later. Remove the nut, fiber washer and gasket from the bottom of the tank. Remove the flush valve assembly from the tank.
5. Disconnect the existing flapper chain from the trip arm. Note the S-hook location and remove the flapper from the flush valve.
6. Install the gasket so the rubber insert each fit into a tank bolt hole. Insert the flush valve into the tank then install the fiber washer and nut, and handtighten the nut. Align the orientation so it matches the original flush valve installation. Wrench tighten the nut 1/2 turn past handtight.

 **WARNING : Risk of personal injury or product damage:**

Tighten hardware to vitreous china products very carefully.
Vitreous china can break and chip if you overtighten bolts.

7. Insert tank bolts into the tank holes.
8. Mount the tank to the toilet so the tank bolts extend through the hole in the toilet. Install a washer and nut to each tank bolt.
9. Alternately tighten the tank bolt nuts while checking the tank for level often. Do not overtighten.
10. Connect the S-hook to the trip levers.
11. Install the refill hose clip to the refill hose and attached to the top of the new flush valve
12. Connect the supply line, and turn on water. Inspect all connections for leakage. Repair as need.
13. Hold the float under water for a few seconds to fill with water for ballast. Adjust the float by sliding it up or down on the float rod until the water level is at the marked water line on the flush valve overflow.
14. Flush the toilet several times to verify proper operation and check all connections for leaks.

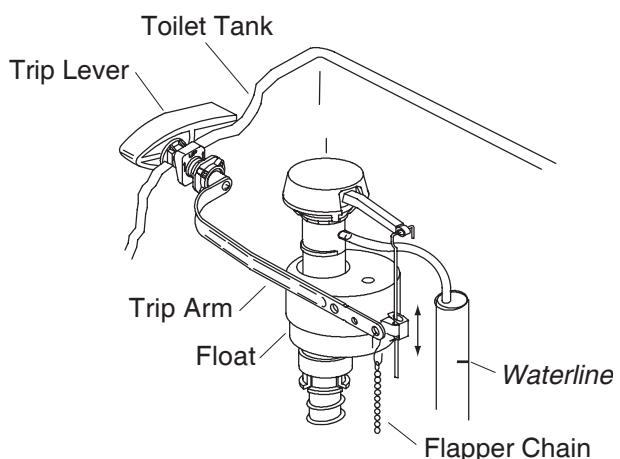
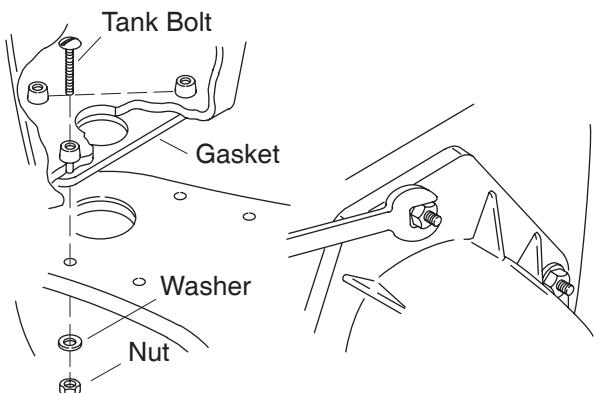
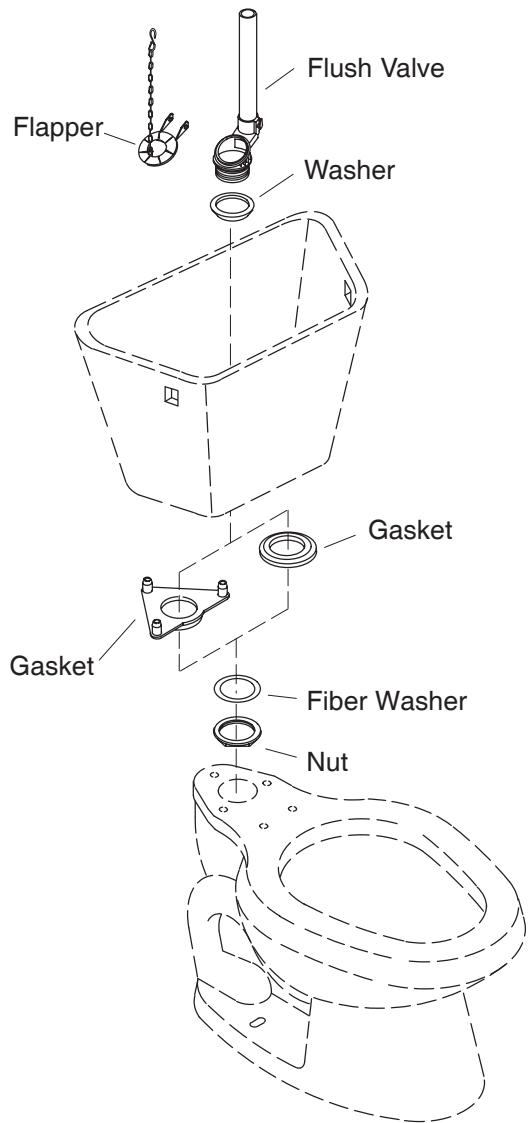


จุดประสงค์การใช้งาน

ใช้ชุดอุปกรณ์ประกอบสุขภัณฑ์นี้ เพื่อเปลี่ยนชุดดาวน้ำออกแทนอุปกรณ์ประกอบสุขภัณฑ์ที่ชำรุด

วิธีการติดตั้ง

1. ปิดวาร์วน้ำและปล่อยน้ำออกจากถังพักน้ำ
 2. กำหนดเส้นระดับน้ำจากวาร์ชุดเดิม ตรวจสอบภายในผนังถังพักน้ำที่กำหนด
จากวาร์วน้ำออกชุดเดิม
 3. ถอนนอตและแหวนออก จากนั้นยกถังพักน้ำออกจากโคลุกภัณฑ์
 4. ถอนนอต แหวนไฟเบอร์ โบลท์ และประเก็น ออกจากถังพักน้ำ
ถอนชุดวาร์วน้ำออกจากถังพักน้ำ
 5. ปลดข้อโซ่และลิ้นปิด-เปิดวาร์วน้ำออกจากก้านยก สังเกตตำแหน่งต่างๆของ
และถอนลิ้นปิด-เปิดวาร์วน้ำออกจากชุดวาร์วน้ำออก
 6. ติดตั้งประเก็น โดยให้ก้านยางสามเข้าในรูถังพักน้ำ ประกอบชุดวาร์วน้ำออก
เข้ากับถังพักน้ำ จากนั้นจึงประกอบแหวนไฟเบอร์และนอต ขันให้ตึงเมื่อ
จัดตำแหน่งวาร์วน้ำออก ขันให้แน่นอีกครั้งโดยใช้ประแจขันอีกครั้งรอบ

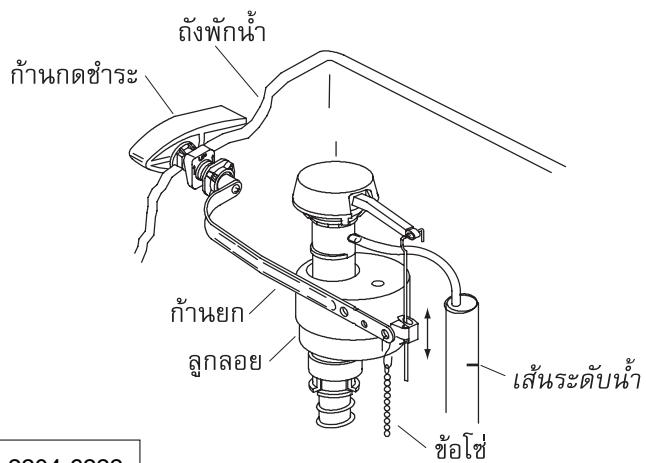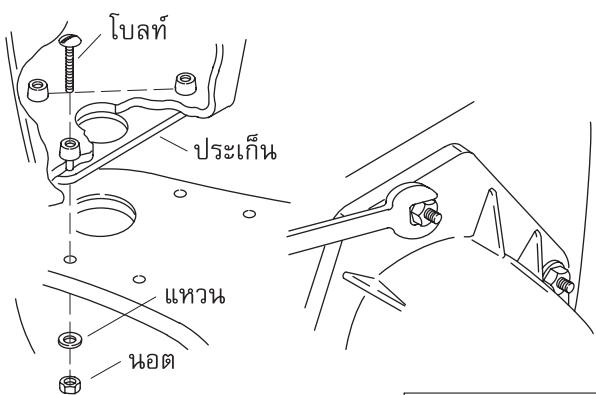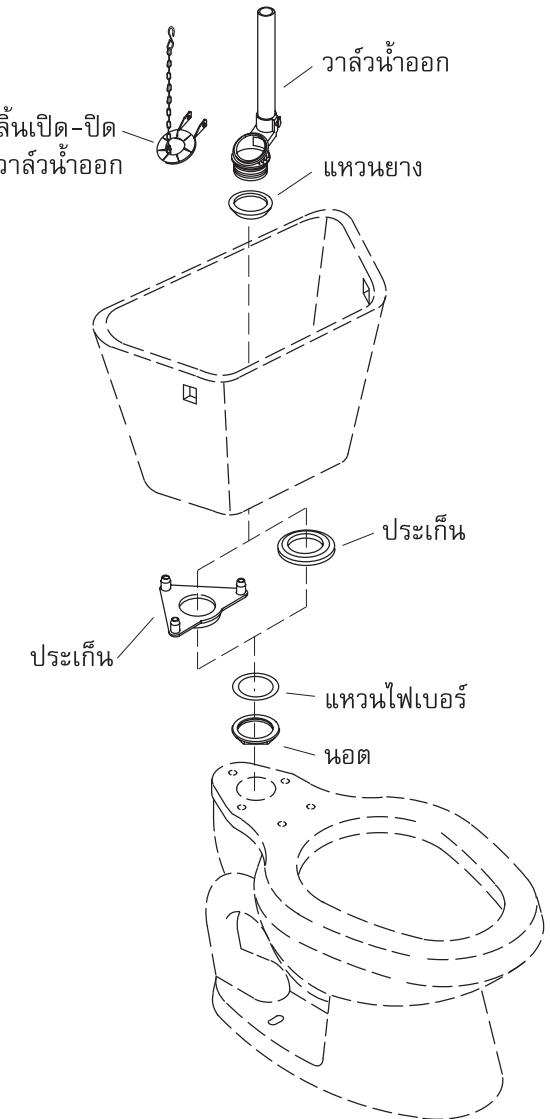

ฟ่ายลูกค้าสัมพันธ์/Call Center: 0-2204-6222
callcenterthailand@kohler.com