


Installation Guide

Integrated Toilet

คู่มือแนะนำการติดตั้ง
สุขภัณฑ์ชิ้นเดียวพร้อมระบบชำระล้างอัตโนมัติ

K-3900X-2

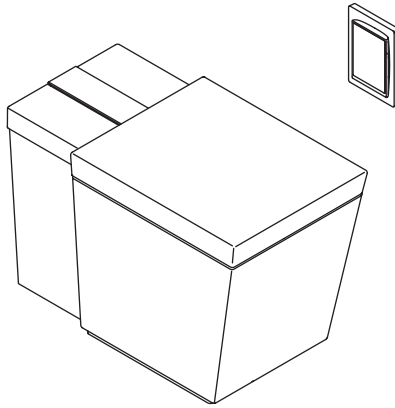

English page 1-17
ภาษาไทย หน้า 18-33

KOHLER®

Important Information

IMPORTANT NOTICE TO INSTALLERS!: Please leave these instructions for the consumer. They contain important information.

NOTE: This product is designed for installation with the electrical and water supplies located through the wall.

Grounding Instructions

- This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.



WARNING: Risk of electric shock. Improper use of the grounding plug can result in a risk of electric shock.

- If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.
- Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.
- This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided — if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the connection should be made by qualified service personnel.

Thank You for Choosing Kohler Company


Thank you for choosing Kohler. Kohler craftsmanship offers you a rare combination of proven performance and graceful sophistication that will satisfy you for years to come. The dependability and beauty of your Kohler product will surpass your highest expectations. We're very proud of our products here at Kohler and we know you will be too.

Please take a few minutes to review this manual before you start installation. If you encounter any installation or performance problems, please don't hesitate to contact us. Our phone numbers and website are listed on back cover.


All information in this manual is based upon the latest product information available at the time of publication. At Kohler, we constantly strive to improve the quality of our products. We reserve the right to make changes in product characteristics, packaging or availability at any time without notice.

Thank you for choosing Kohler Company.


Tools and Materials

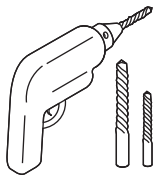

Drill with Assorted Bits

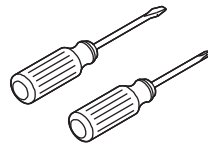


Assorted
Screwdrivers

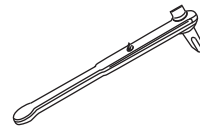


Offset Screwdriver




Scissors



Adjustable Wrench



Knife



Pencil



Pliers




Band Tape


Plus:

- Protective Material
- Tape


Parts Bag Contents

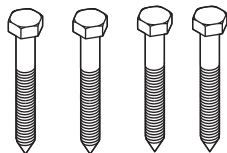

5/16" x 2-1/2" Lag Bolts
4 PCS



5/16" Lag Bolt Anchors
4 PCS

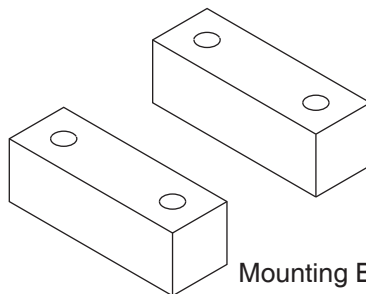

Mounting Blocks
2 PCS




Caps
2 PCS



#10 x 1-1/2"
Screws
2 PCS



Bushings
2 PCS




Wax Ring




Floor Flange

Other Parts

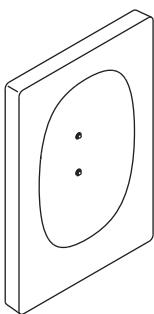


Docking
Station



Remote Control




4.5x45DING
Lag Bolts
2 PCS




UX6 x 35
Lag Bolt Anchors
2 PCS




Universal
Adapter



Shut-off Valve

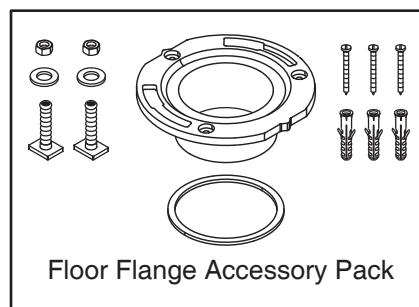

Floor Flange Accessory Pack

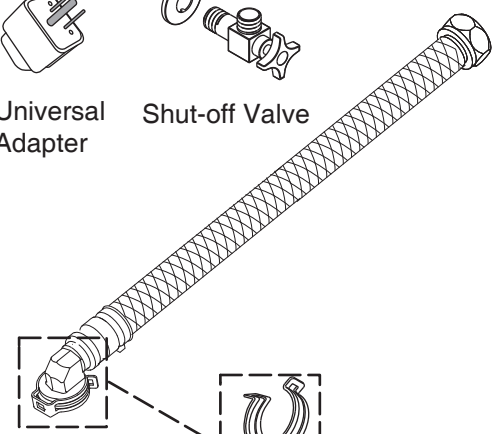

Supply Hose



Clip

Before You Begin



WARNING: Risk of electric shock. Disconnect power before servicing.



WARNING: Risk of electric shock. Connect only to a properly-grounded, grounding-type receptacle which is protected by a 220~240 V, 15 A, 50/60 Hz Ground-Fault Circuit-Interrupter (GFCI) or Earth-Leakage Circuit-Breaker (ELCB). Do not remove the grounding pin or use a grounding adapter.



CAUTION: Risk of personal injury. This toilet weighs approximately 58 kg. Lift the toilet with two people, employing proper lifting technique.



CAUTION: Risk of hazardous gases. If a new toilet is not installed immediately, temporarily place a rag in the floor flange opening.



CAUTION: Risk of product and property damage. This toilet is not intended to be installed in buildings where temperatures will drop below 1°C. If temperature drops below 0°C, the frozen water in tank could damage the tank resulting in leaking.



CAUTION: Risk of product damage. Turn on the water and allow water to flow through the supply pipe to flush the system of any debris before connecting inlet valve.

- ☐ Carefully inspect the new toilet for damage.
- ☐ Follow all local plumbing and electrical codes.

Confirm all parts below are included before beginning the installation.

Parts Bag Contents

- ☐ (4) 5/16" x 2-1/2 " Lag Bolts
- ☐ (2) 5/16" Lag Bolt Anchors
- ☐ (2) Mounting Blocks
- ☐ (2) Plastic Caps
- ☐ (2) #10 x 1-1/2" Screws
- ☐ (2) Bushings
- ☐ (1) Wax Ring
- ☐ (1) Floor Flange

Remote Control Box Contents

- ☐ (1) Docking Station
- ☐ (1) Remote Control
- ☐ (1) Docking Station Power Cord
- ☐ (1) FM Antenna
- ☐ (1) AUX In Cord
- ☐ (2) UX 6 x 35 Lag Bolt Anchors
- ☐ (2) 4.5 x 45 DING Lag Bolts



User Guidelines

- ☐ Homeowner's Guide
- ☐ Installation Guide
- ☐ Quick Reference Guide
- ☐ Toilet Installation Template

Other Parts

- ☐ (1) Supply Hose
- ☐ (1) Clip
- ☐ (1) Adapter
- ☐ (1) Shut-off Valve
- ☐ (1) Floor Flange Accessory Pack

Dimensions are approximate.
Unit: mm

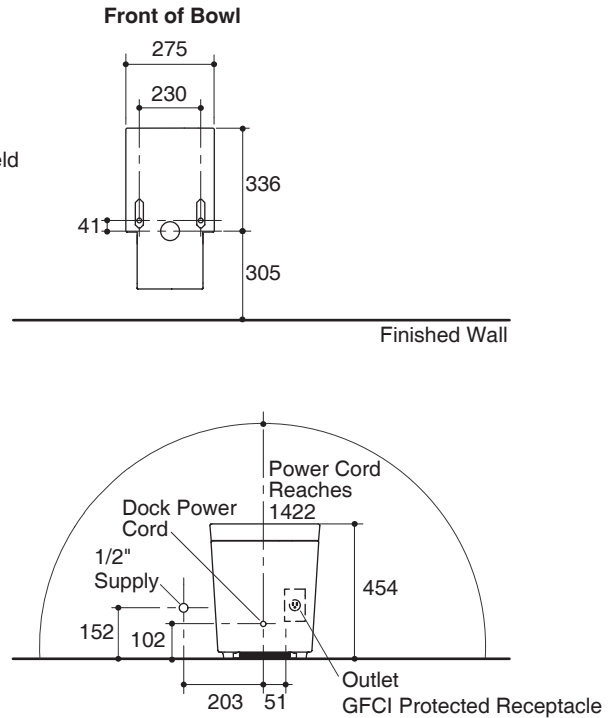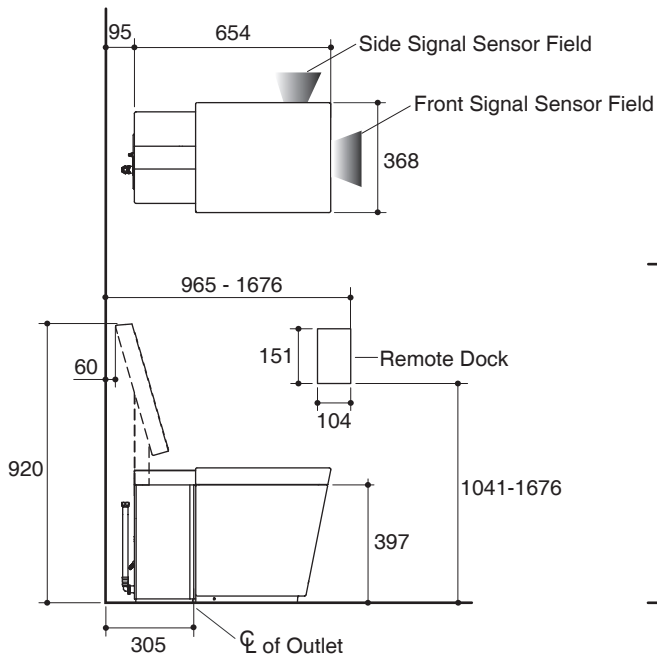


Rough-in - Wall Mount Electrical and Water Supply

NOTICE: The locations for the supply shut-off, electrical outlet, and docking station cord are suggested locations. Make sure all installations adhere to applicable codes and standards.

NOTICE: Locating the supply stop behind the toilet will make it difficult to remove the back panel.

IMPORTANT! Do not install any items behind the toilet that will interfere with the lid when it is raised. All decorative items should be at least 94 cm high to allow clearance for the seat.

- ☐ The remote docking station is equipped with a 5 meter power cord.
- ☐ The supplied power cord is 1422 mm in length. Install the GFCI protected outlet within 1422 mm of the toilet location.
- ☐ The toilet is equipped with a motion sensor to automatically open the lid when movement is sensed. Sensitivity can be adjusted using the User Interface.
- ☐ The toilet is equipped with a motion sensor to automatically open the ring when the light is interrupted. The sensor is located on the right side of the toilet. This sensor has a maximum range of 20 cm. Keep this area free of obstructions.
- ☐ 1/2" OD compression supply stop outlet is required unless an adapter is used.

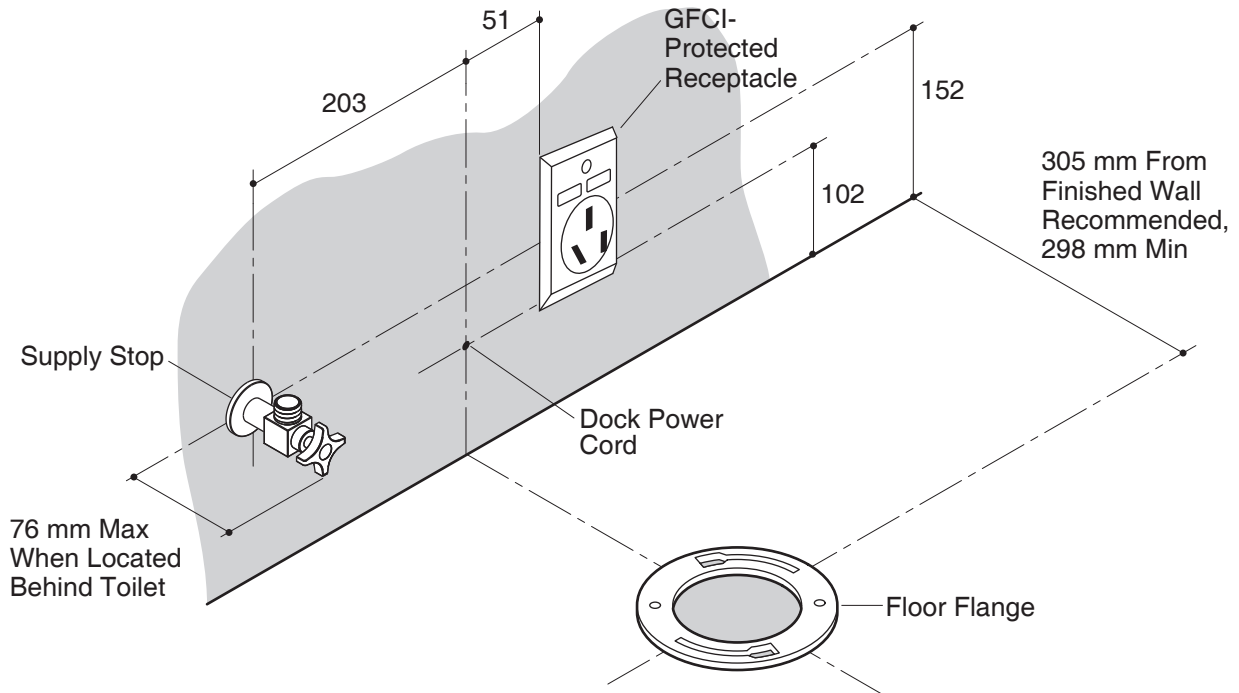

Prepare the Site



WARNING: Risk of electric shock. Disconnect power before installation or servicing.



WARNING: Risk of electric shock. Connect only to a properly-grounded, grounding-type receptacle which is protected by a 220-240V, 50/60 Hz Ground-Fault Circuit-Interrupter (GFCI) or Earth-Leakage Circuit-Breaker (ELCB). Do not remove the grounding pin or use a grounding adapter.



WARNING: Risk of electric shock. For hardwire installations/through-floor electrical supply: Connect only to a properly-grounded, dedicated circuit protected by an Class A Ground-Fault Circuit-Interrupter (GFCI) or Earth-Leakage Circuit-Breaker (ELCB).

NOTE: Locating the supply stop behind the toilet will make it difficult to remove the back panel.

Install the Dock Power Cord

- ☐ If the finished wall has not been installed, embed the in-wall cable conduit to route the docking station power cord. (concealed type)
- ☐ If the finished wall is installed, use the slot board cable to route the cord to the docking station location. (out-loading type)

Install the Water Supply

IMPORTANT! When installing the supply hose, connect it to the toilet first, then the supply stop.

NOTE: The supplied water supply hose is 18" (46 cm) in length. The supplied hose must be used for this installation.

- ☐ Install the water supply and supply stop.
- ☐ Flush the water supply line into a pail or other container to remove all debris.

Install the Electrical Service

NOTE: The supplied power cord is 56" (1420 mm) in length.

- ☐ Locate a dedicated 220-240 V, 50/60 Hz, 15 A or more grounding-type receptacle, protected by a GFCI or ELCB, within 142 cm of the back of the toilet.

Install External Speaker Wires (optional)

- ☐ If external speakers will be used, install the speaker wires at this time with RCA plug installed at line-end (not presented).

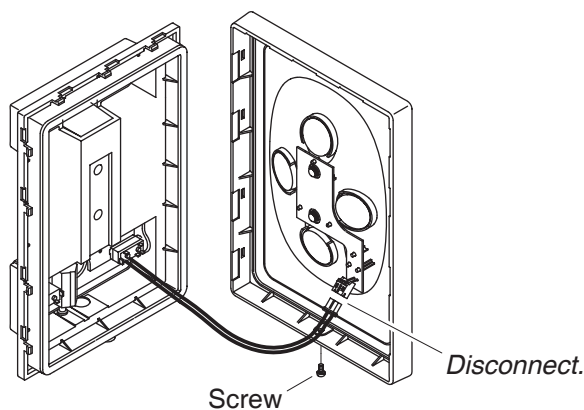


Fig.#1

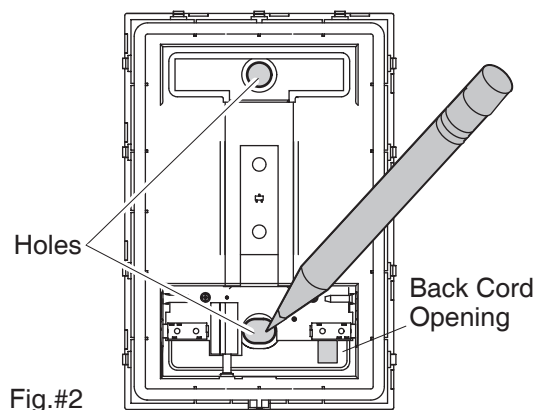


Fig.#2

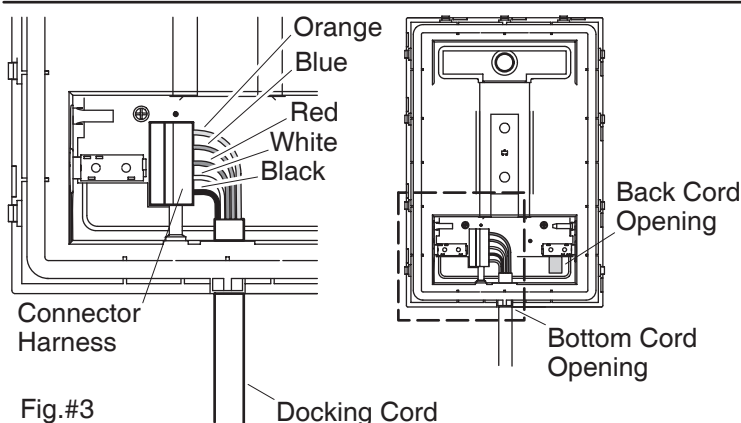


Fig.#3




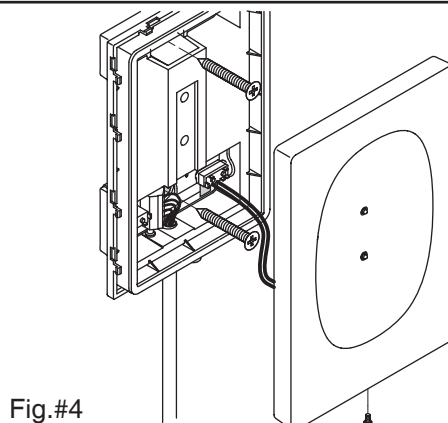


Fig.#4

Install the Remote Dock

NOTE: The docking station comes with a 5 meter cord. Locate the docking station to allow the docking cord to reach the toilet.

- ☐ Unpack the box containing the remote control components.
- ☐ Remove the small screw on the bottom of the docking station.
- ☐ Carefully remove the cover plate by plug the tool into the gap on the top of the back, gently prying the sides of the cover plate out until they disconnect from the dock. (see Fig. #2)
- ☐ Carefully disconnect the cover plate plug.
- ☐ Tape the screw to the cover plate and set it aside.
- ☐ For installations using the concealed type, route the power cord through the back cord opening.
- ☐ For installations using the out-loading type, route the power cord through the bottom cord opening.
- ☐ Position the docking station in the installation position and mark the screw locations using the dock as a template.
- ☐ Drill appropriate size mounting holes at the screw mounting locations. The size of the hole will depend on the need for wall anchors, wall material, and installation requirements.
- ☐ Loosen each of the five small screws located where the wires will be connected.
- ☐ Run the power cord into the docking station through the back cord opening in concealed type or the bottom cord opening in out-loading type.
- ☐ Position the docking station over the installation location, connect the docking station to the wall using two screws.
- ☐ Cut the tin (about 2 mm) of the bare end of the wire.
- ☐ Slide the bare end of the wires into the correct port (see Fig. #3) according to the color and tighten each screw to secure the wires in place, connect the cover plate plug.
- ☐ Snap the cover plate back into place.
- ☐ Remove the screw and tape from the cover plate and secure the cover plate with the screw to the docking station.

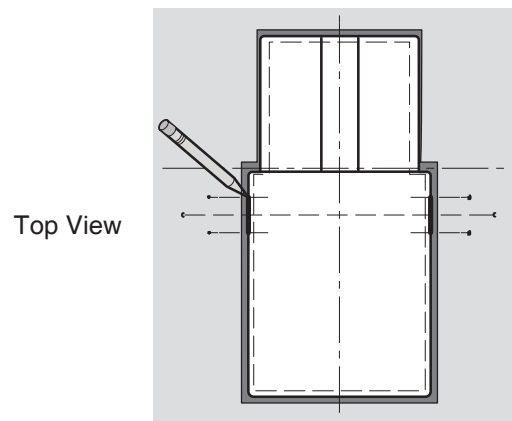
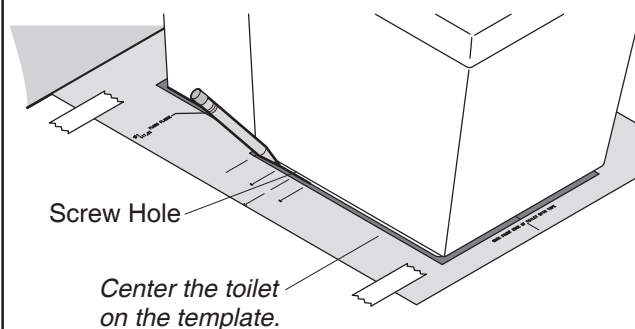
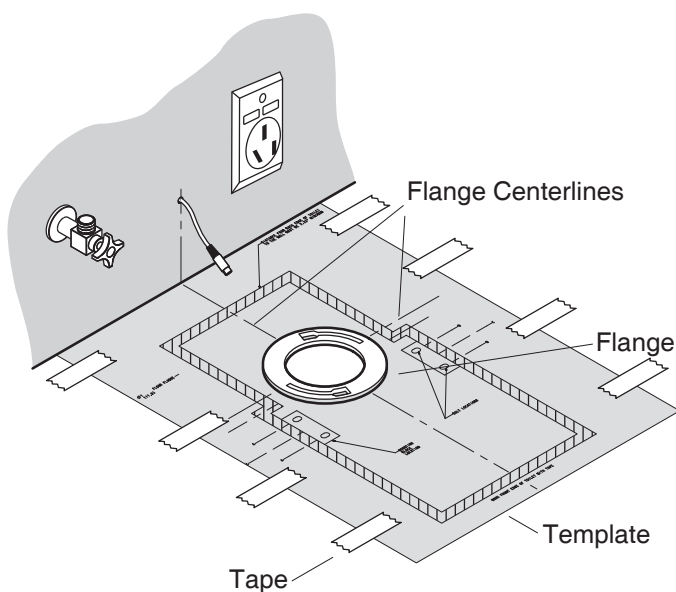


Prepare the Installation Location

IMPORTANT! Risk of product damage. If there are T-bolts extending from the flange, remove them. T-bolts are not required for this installation.

IMPORTANT! Because of the unique design of this toilet, the width of the bottom edges of the toilet will vary. The following steps are required because of this variation.

- ☐ Cut out the inside of the flange area on the template along the dotted line.
- ☐ Position the template with the hole positioned over the flange. It is critical that the centerlines marked on the template are centered on the flange.
- ☐ Secure the template to the floor with tape.
- ☐ Confirm the template is correctly positioned and centered over the flange.
- ☐ Position the toilet on the template. Make sure the front of the base of the toilet is aligned with the markings on the template.
- ☐ Confirm the left/right position of the toilet left or right so that an equal amount of shaded area is visible on each side of the template.
- ☐ Directly under the screw holes on each side of the toilet, accurately mark the bottom edge of the base. The mark should intersect the lines labeled "C" and "A" or "B" on each side of the template.

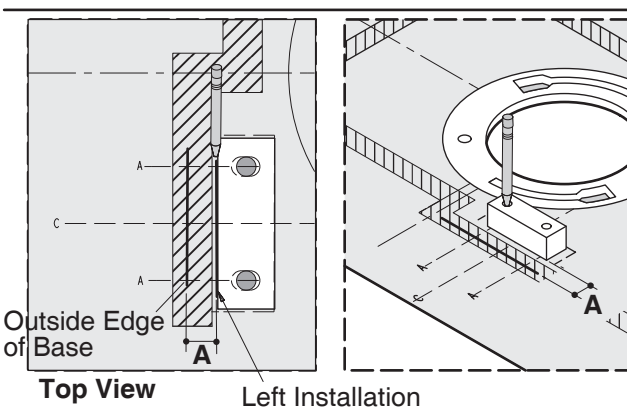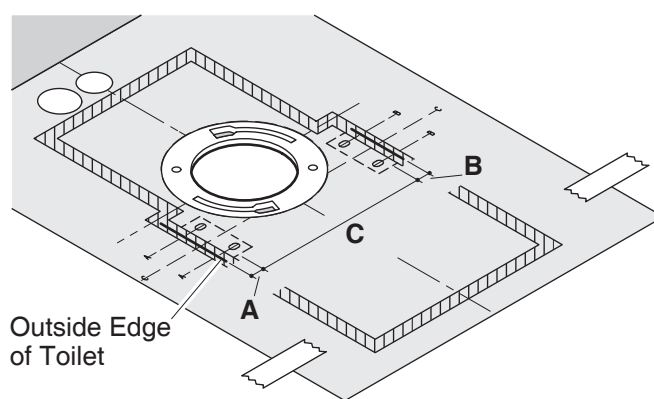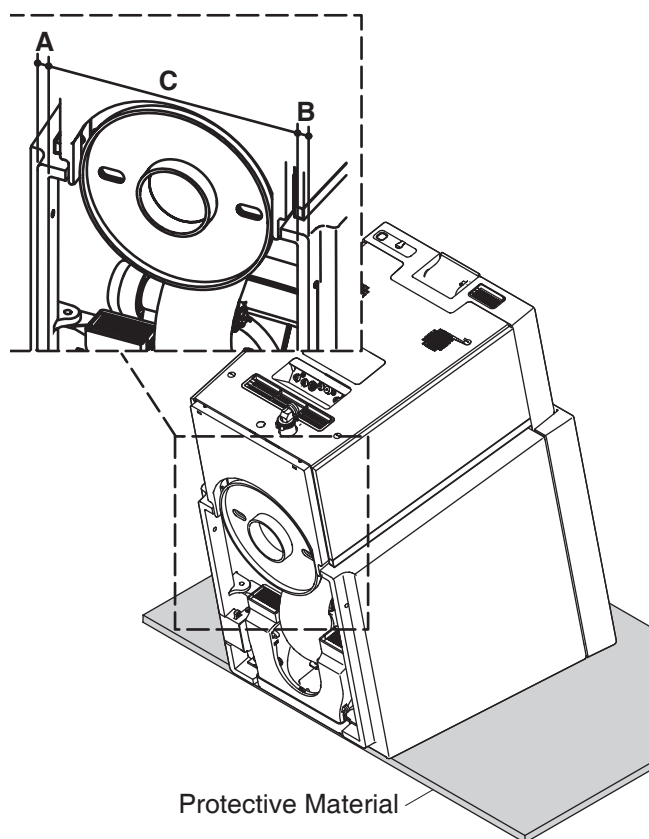

Determine Mounting Block Location

NOTE: There is a small amount of biodegradable, environmentally safe antifreeze added to the toilet tank to prevent freezing during shipment. When the toilet is tipped forward, a small amount of the antifreeze may run onto the floor. Make sure the floor is protected.

- Position pieces of the box or other protective material on the floor directly in front of the toilet.
- Gently tilt the toilet forward until it rests on the front surface.

NOTE: The installation range of the mounting block is marked on the template. Due to variances in the width of the base, the exact location must be determined by the installer.


- Measure the width of the base, dimension "A", on the left side of the toilet.
- From the mark indicating the outside edge of the base, measure inward and mark dimension "A" on the template lines marked "A".
- Draw a line connecting the marks on each of the lines labeled "A".
- Measure the width of the base, dimension "B," on the right side of the toilet.
- From the mark indicating the outside edge of the base, measure inward and mark dimension "B" on the template line marked "B".
- Draw a line connecting the marks on each of the lines labeled "B".

IMPORTANT! Dimension "C" is the distance between the inside edges of the right and left base. The distance between the outside edges of the mounting blocks should be slightly less than dimension "C". The distance between the edge of the outside edge of the mounting block and the inside edge of the base must be 2 mm or less, or the strength of the mounting block will be compromised.

- Measure dimension "C" on the template, starting at the inside line.
- Position a mounting block in the area indicated on the left side of the template. Align the outside edge of the mounting blocks with the inside line. **Then move parallel 2 mm to the inside.**


Determine Mounting Block Location (cont.)

- ❑ Insert a pencil into the holes in the mounting blocks and mark the center of the holes after positioning the mounting block.
- ❑ Remove the mounting blocks.
- ❑ Position a mounting block in the area indicated on the right side of the template. Align the outside edge of the mounting blocks with the inside line. **Then move parallel 2 mm to the inside.**
- ❑ Insert a pencil into the holes in the mounting blocks and mark the center of the holes after positioning the mounting block.
- ❑ At the locations where the centerline in the slots marked on the template and the pencil mark indicating the hole locations meet, drill a 13 mm hole if anchors will be used.
- ❑ If anchors will be used, insert one of the supplied anchors in each of the holes.
- ❑ Remove the template.

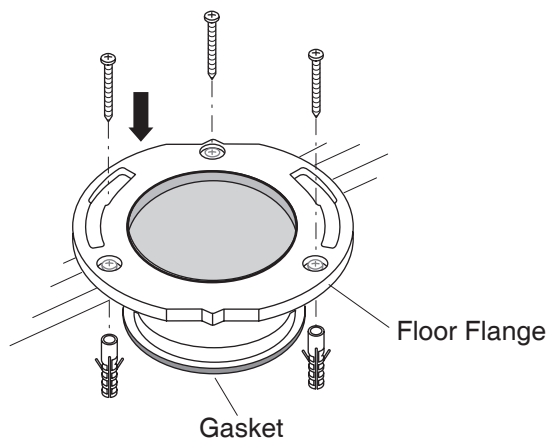

Install the Floor Flange

- ❑ Position floor flange on the floor. Mark three anchor holes on the floor with pencil.
- ❑ Drill 10 mm anchor holes. Insert the anchors.
- ❑ Place the gasket under the floor flange. Position floor flange on the floor.
- ❑ Tighten the screws.

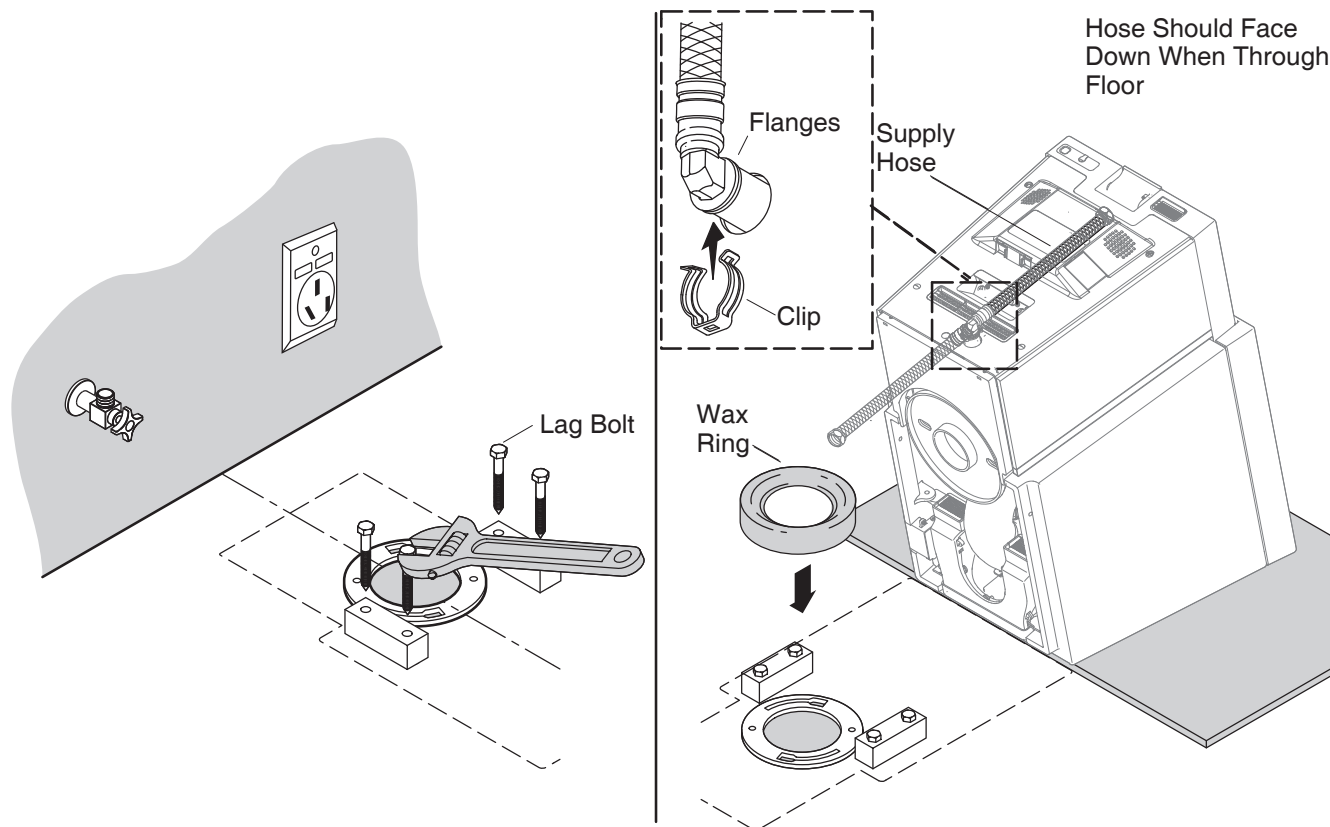

Install Mounting Blocks and Wax Ring

- Position the mounting blocks over the mounting holes.
- Secure each of the mounting blocks with two of the supplied lag bolts.
- Position a wax ring on the flange.


Connect the Supply Hose to the Toilet

- Slide the supply hose outlet into the toilet water inlet.
- Slide the clip over the flanges on the supply hose and inlet. Make sure both flanges rest in the gap in the clip and are firmly held in place.



CAUTION: Risk of property damage. It is critical that the supply hose be firmly secured by the clip. The supply hose could be displaced when under pressure if the clip is not correctly installed, resulting in water damage.

IMPORTANT! Confirm the clip is firmly holding the supply hose in place. The clip will be able to rotate freely with no significant resistance when properly installed.

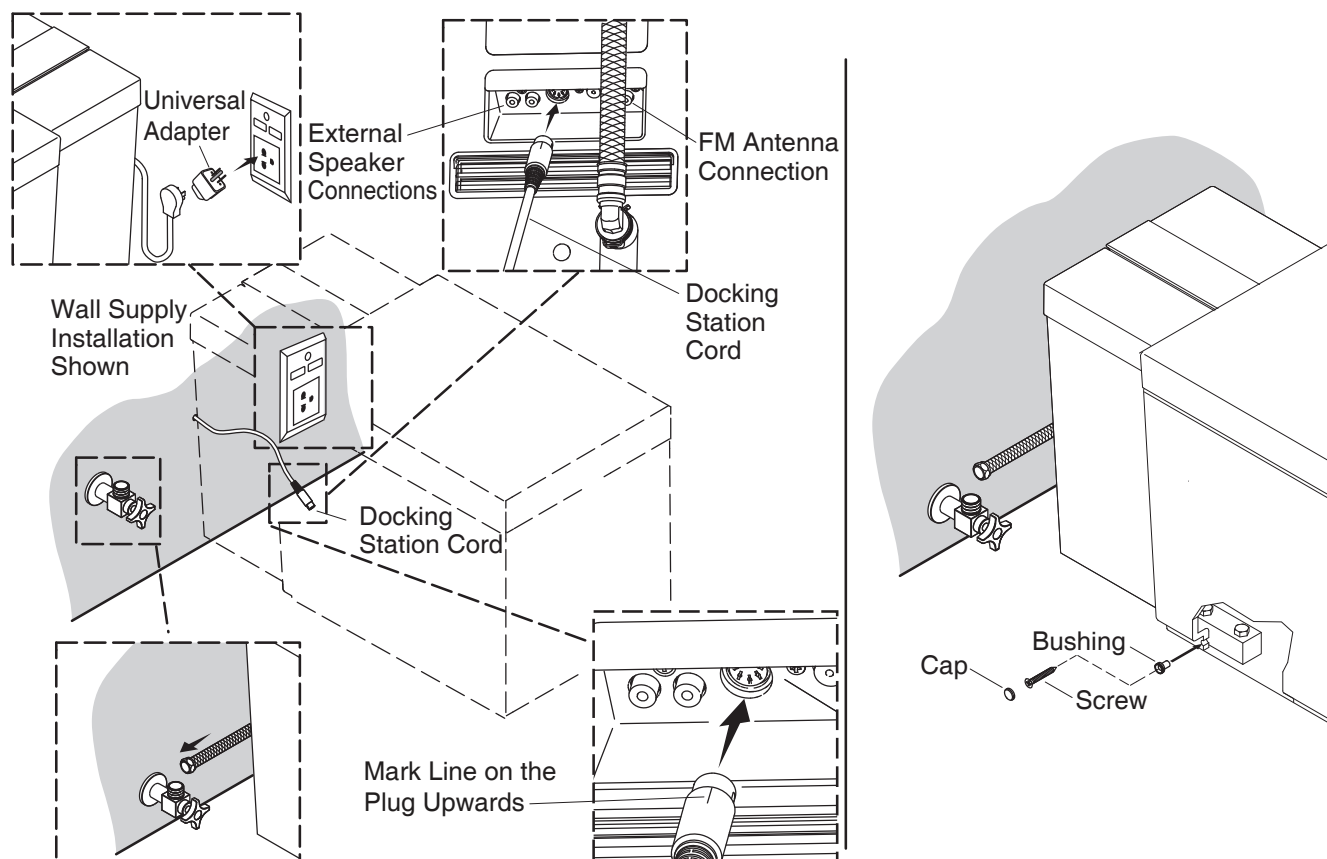

Install the Toilet

Position the Toilet

- ☐ Carefully lower the toilet into place, making sure the water supply line and electrical cord do not interfere with the toilet when it is in place.
- ☐ Connect the water supply hose to the supply stop.
- ☐ Fasten connect the docking station power cord mark line on the plug upward.
- ☐ Connect the optional FM antenna (not shown) to the toilet if needed. In normal case no need to use the external FM antenna as there's already built-in antenna inside the toilet. However if the environment is causing unsatisfactory receiving effect, please insert and spread the accessory external FM antenna.
- ☐ Connect the external speaker wires (not shown) to the toilet if external speakers are installed (RCA plug).
- ☐ Place the remote control on the docking station.
- ☐ Connect the power by universal adapter.
- ☐ Turn on the water supply.

Check for Leaks

NOTE: Once the power is connected, the toilet will automatically enter start-up mode. This process takes several minutes.

NOTE: If there is a failure during start-up mode, follow the directions on the remote control.

- ☐ Once the start-up sequence has been completed flush the toilet using the manual buttons on the side of the toilet.
- ☐ Let the toilet fully refill and check for leaks.



Install the Toilet (cont.)

Secure the Toilet

- Insert the bushing into the screw hole in the side of the toilet.
- Insert the supplied screws into the screw holes.


NOTE: A ratchet style screwdriver is the most effective tool when tightening the screws due to their close proximity to the floor. It is difficult to achieve enough force with a standard screwdriver. There is a greater risk of stripping the screws when a drill is used.

- Thread each screw into the mounting blocks. Tighten the screws evenly to maintain the correct toilet position.
- Install the caps over the screw holes.

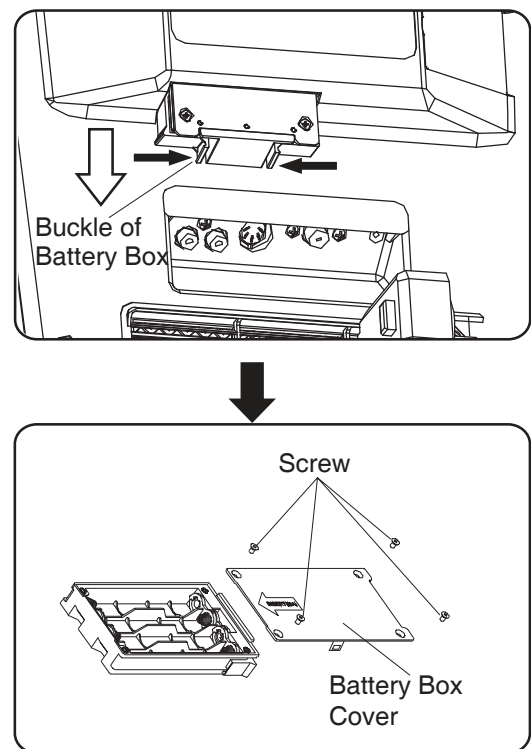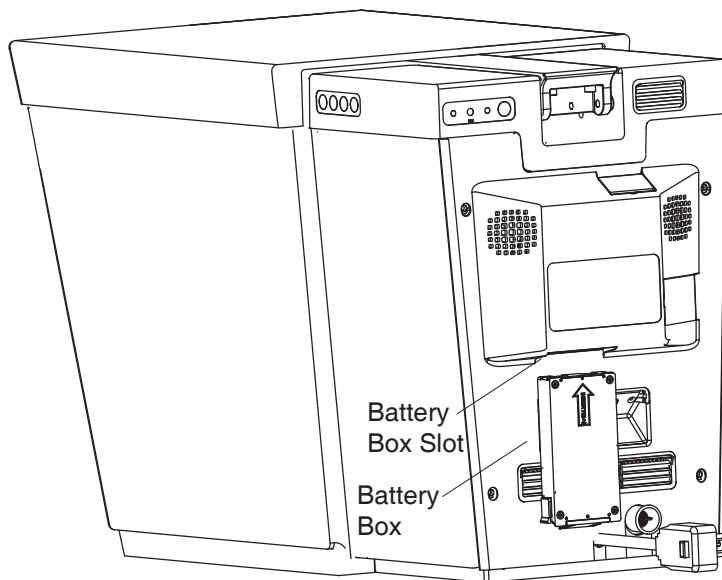

Install Battery Box

- Pull out the connecting wire under the battery box.
- Press the buckle and pull it down, and take out the battery box from the rear panel (as shown in figure).
- Unscrew the screw with a cross screwdriver and remove the battery box cover.
- Eight AA batteries are loaded correctly according to the mark on the battery box.
- Tighten the screw on the battery box cover.
- Insert the battery box properly into the slot according to the mark on the battery box cover, and push the battery box until it is clamped.

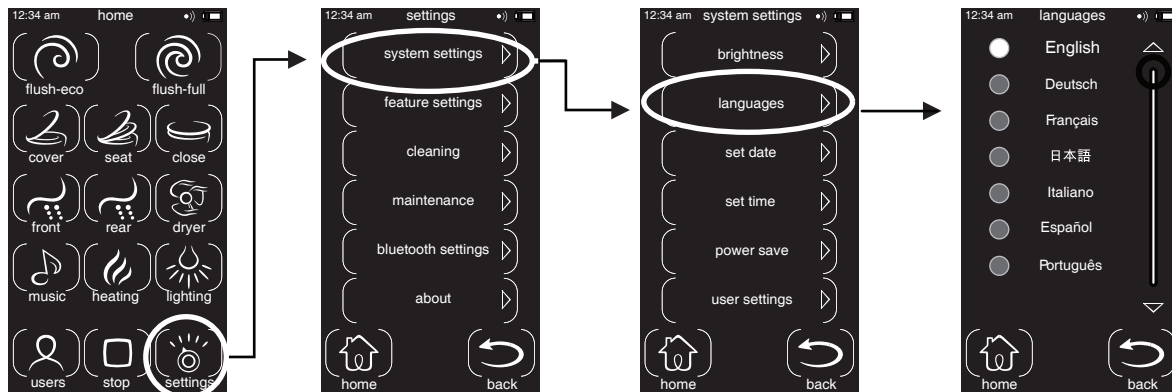

Remote Control Setup - Set the Language

NOTE: If the remote control has not charged enough to be removed from the docking station, perform these steps with remote control attached to the docking station.


NOTE: Chinese is the default language. Skip this step if Chinese is the desired language.

Changing the On-Screen Language

- ☐ Select **[settings]**.
- ☐ Select **[system settings]**.
- ☐ Select **[languages]**.

NOTE: If the language you desire does not appear on the screen, move the scroll bar down to see additional language options.

- ☐ Select the radio button for your desired language. The screen icons will immediately change.
- ☐ Select **[home]** to return to the main screen or **[back]** to return to the previous screen.

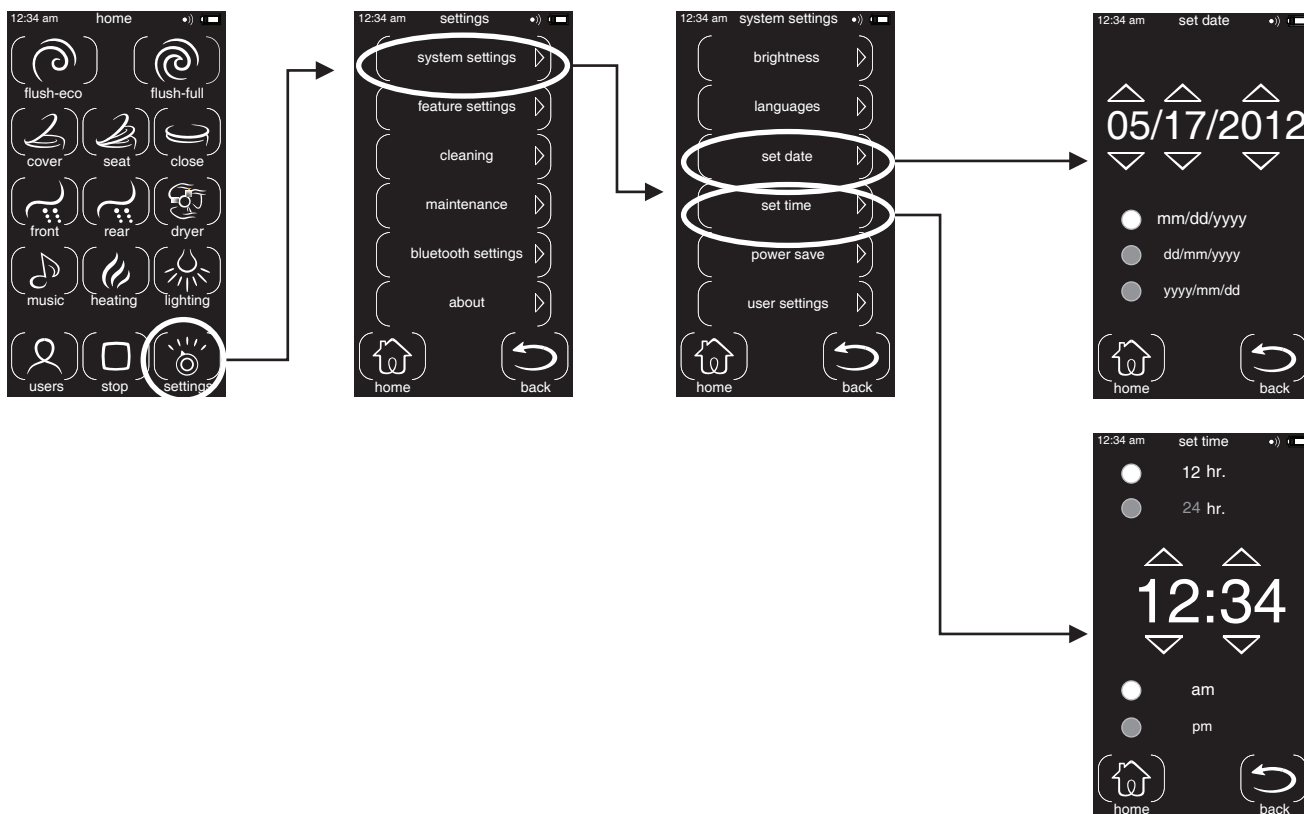


Remote Control Setup - Set the Date and Time

Set the Date

- ☐ Select **[settings]**.
- ☐ Select **[system settings]**.
- ☐ Select **[set date]**.
- ☐ Use the up and down indicators to adjust the day, month, and year.
- ☐ Select the desired radio button for the date format.
- ☐ Select **[home]** to return to the main screen or **[back]** to return to the previous screen.

Set the Time

- ☐ Select **[settings]**.
- ☐ Select **[system settings]**.
- ☐ Select **[set time]**.
- ☐ Select the radio button for the **[12 hr.]** or **[24 hr.]** option.
- ☐ Use the up and down indicators to adjust the hour and minute.
- ☐ Select the radio button for the **[am]** or **[pm]** option.
- ☐ Select **[home]** to return to the main screen or **[back]** to return to the previous screen.

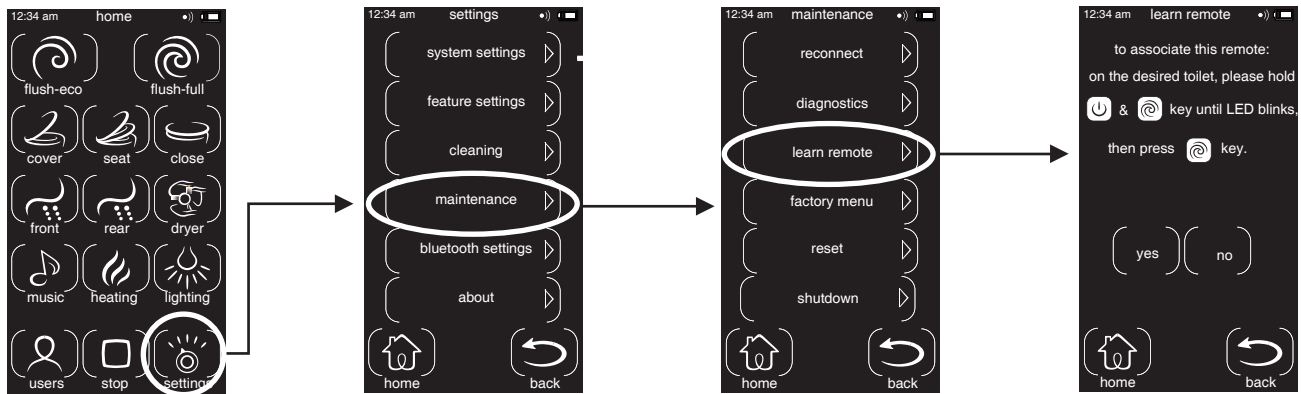

Remote Control Setup - Connect the Remote Control

NOTE: This setting can be used to connect a new or a second remote control.

- ☐ Select **[settings]**.
- ☐ Select **[maintenance]**.
- ☐ Select **[learn remote]**.
- ☐ Follow the instructions on the remote screen. When complete select **[yes]**.



Complete the Installation

- ☐ Press the flush button on the remote control. Confirm the toilet flushes.
- ☐ Remove the protective film from the toilet and remote.
- ☐ Apply caulk around the base of the toilet following the caulk manufacturer's instructions.

คู่มือแนะนำการติดตั้ง

สุขภัณฑ์ชักโครกเดี่ยวพร้อมระบบชำระทำความสะอาดอัตโนมัติ

ข้อมูลสำคัญ

ข้อสำคัญถึงผู้ติดตั้ง! คู่มือนี้มีข้อมูลสำคัญ โปรดมอบเอกสารให้กับเจ้าของผลิตภัณฑ์

ข้อสังเกต สุขภัณฑ์นี้ถูกออกแบบมาสำหรับการติดตั้งกับระบบไฟฟ้าและท่อน้ำดีแบบฝังผนัง

แนะนำการติดตั้งสายดิน

- ผลิตภัณฑ์นี้จะติดตั้งสายดิน ในกรณีที่เกิดไฟฟ้าลัดวงจร สายดินจะช่วยลดความเสี่ยงการเกิดไฟฟ้าลัดวงจร ปลั๊กไฟของสุขภัณฑ์ได้พ่วงสายดินไว้เรียบร้อยแล้ว ควรเสียบปลั๊กไฟบนเต้าเสียบที่มีสายดินร่วมด้วย



อันตราย ความเสี่ยงซึ่งอาจทำให้เกิดกระแสไฟฟ้าลัดวงจร การใช้ปลั๊กไฟสายดินที่ไม่เหมาะสม อาจเป็นสาเหตุทำให้เกิดไฟฟ้าลัดวงจร

- หากจำเป็นให้ทำการซ่อมแซมหรือเปลี่ยนสายไฟหรือปลั๊กไฟใหม่ ห้ามต่อสายดินกับสะพานไฟ (เบรกเกอร์) มีสายไฟสีเขียวเป็นสายฉนวนและสายสีเหลืองเป็นสายดิน
- หากไม่แน่ใจวิธีการติดตั้งสายดินที่ถูกต้อง โปรดสอบถามช่างไฟฟ้าที่ชำนาญการหรือเจ้าหน้าที่บริการทางด้านเทคนิคของบริษัทฯ
- สุขภัณฑ์นี้ถูกติดตั้งสายไฟและปลั๊กไฟที่เหมาะสมมาจากโรงงาน ให้แน่ใจว่า หัวปลั๊กไฟและเต้าเสียบมีรูปแบบเดียวกัน ไม่แนะนำให้ใช้อะแดปเตอร์กับสุขภัณฑ์นี้ ห้ามแก้ไขหรือดัดแปลงปลั๊กไฟที่มาพร้อมกับสุขภัณฑ์ – ในกรณีที่รูปแบบปลั๊กไฟต่างกัน การติดตั้งจะต้องกระทำโดยช่างไฟฟ้าที่ชำนาญการหรือเจ้าหน้าที่บริการทางด้านเทคนิคของบริษัทฯ

ขอขอบพระคุณที่เลือกใช้สุขภัณฑ์โคห์เลอร์


ขอขอบพระคุณที่ท่านได้เลือกใช้ผลิตภัณฑ์โคห์เลอร์ ผลิตภัณฑ์ของโคห์เลอร์ถูกสร้างสรรค์อย่างปราณีตโดยผู้เชี่ยวชาญที่มีประสบการณ์ จึงเปรียบประดุจดังประติมากรรมชิ้นเอกที่มีความโดดเด่นทั้งในด้านประโยชน์ใช้สอย ผสมผสานไปกับความหรูหรางดงามในดีไซน์ที่ภูมิฐานของผลิตภัณฑ์ ก่อให้เกิดความสุนทรีภาพทางอารมณ์ที่ควรค่าแก่การเป็นเจ้าของตราบนานเท่านาน ท่านจะภูมิใจในผลิตภัณฑ์ที่มีเอกลักษณ์เฉพาะตัวเหมือนกับเราที่มีความภูมิใจในผลิตภัณฑ์พร้อมกับคุณภาพภายใต้ชื่อเสียงของโคห์เลอร์

โปรดใช้เวลาสักครู่เพื่อศึกษาคู่มือก่อนการติดตั้ง หากท่านพบปัญหาเกี่ยวกับการติดตั้งหรือสุขภัณฑ์ กรุณาติดต่อเราทันที เบอร์โทรศัพท์และเว็บไซต์ของเราได้แจ้งอยู่บนปกหลัง


ข้อมูลในคู่มือเล่มนี้มาจากข้อมูลผลิตภัณฑ์ล่าสุดที่มีอยู่ในช่วงระยะเวลาการจัดพิมพ์ บริษัทฯ ได้พัฒนาผลิตภัณฑ์ต่อเนื่องอย่างสม่ำเสมอ ดังนั้นบริษัทฯ ขอสงวนสิทธิ์ในการเปลี่ยนแปลงข้อมูลผลิตภัณฑ์และบรรจุภัณฑ์ที่มีอยู่โดยมีต้องแจ้งให้ทราบล่วงหน้า

ขอขอบพระคุณที่ท่านเลือกใช้สุขภัณฑ์โคห์เลอร์


เครื่องมือและอุปกรณ์

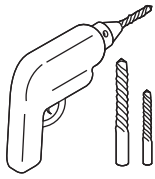

สว่านและดอกสว่าน

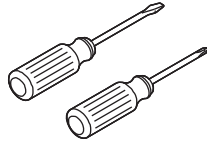


ไขควง

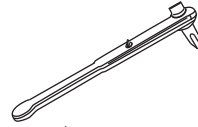


ไขควงออฟเซต




กรรไกร

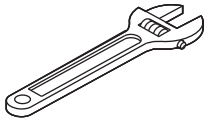

ประแจ



คัตเตอร์



ดินสอ



คีม




ตลับเมตร


เพิ่มเติม:

- วัสดุรองพื้น
- เทปกาว


ชุดอุปกรณ์ภายในตู้

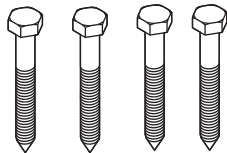

โบลท์ 5/16" x 2-1/2"
4 ชิ้น



พุกขนาด 5/16"
4 ชิ้น

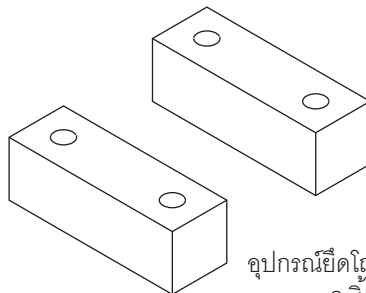

อุปกรณ์ยึดโกลุขภัณฑ์
2 ชิ้น




ฝาปิด
โกลุขภัณฑ์
2 ชิ้น




สกรู 10 x 1-1/2"
2 ชิ้น



ปลอก
2 ชิ้น




ซีดีกันกลิ่น

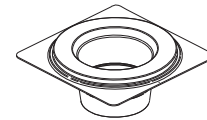


หน้าแปลน

อุปกรณ์อื่นๆ

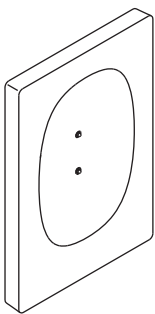


แผ่นชาร์จ

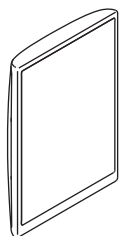

รีโมทคอนโทรล




สกรู 4.5 x 45
2 ชิ้น




พุก UX6 x 35
2 ชิ้น




หัวแปลงปลั๊กไฟ
(สากล)



วาล์วเปิด-ปิดน้ำ

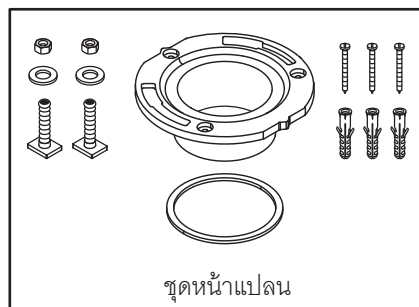

ชุดหน้าแปลน

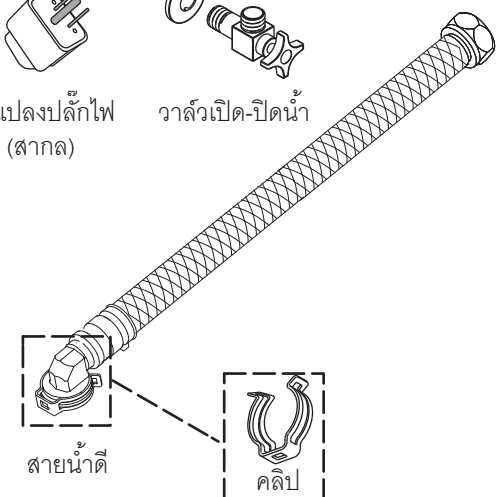

สายน้ำดี



คลิป

ก่อนการติดตั้ง



อันตราย ความเสี่ยงซึ่งอาจทำให้เกิดกระแสไฟฟ้าลัดวงจร ถอดปลั๊กไฟทุกครั้งก่อนการติดตั้งและการซ่อมบำรุง



อันตราย ความเสี่ยงซึ่งอาจทำให้เกิดกระแสไฟฟ้าลัดวงจร ติดตั้งสายดินโดยใช้อุปกรณ์ป้องกันกระแสไฟฟ้าลัดวงจร GFCI หรือเบรกเกอร์ ELCB ขนาด 220~240 โวลต์, 15 แอมแปร์, 50/60 เฮิร์ตซ์ ห้ามถอดหรือดัดแปลงเต้าเสียบปลั๊กไฟสายดิน



ข้อควรระวัง ความเสี่ยงซึ่งอาจทำให้ได้รับบาดเจ็บ สุขภัณฑ์ที่มีน้ำหนักประมาณ 58 กิโลกรัม ห้ามยกหรือติดตั้งโดยไม่มีผู้ช่วยติดตั้ง ควรมีผู้ช่วยยกสุขภัณฑ์



ข้อควรระวัง ความเสี่ยงซึ่งอาจทำให้เกิดแก๊ส หากยังไม่ติดตั้งสุขภัณฑ์ใหม่ทันที ควรใช้ผ้าอุดหน้าแปลนของท่อน้ำทิ้งก่อน เพื่อป้องกันกลิ่น



ข้อควรระวัง ความเสี่ยงซึ่งอาจทำให้เกิดผลิตภัณฑ์ชำรุด ไม่ควรติดตั้งสุขภัณฑ์ในพื้นที่ซึ่งมีอุณหภูมิต่ำกว่า 1 องศาเซลเซียส หากอุณหภูมิลดต่ำกว่า 0 องศาเซลเซียส น้ำที่แข็งตัวอยู่ในถังพักน้ำอาจทำให้ถังพักน้ำชำรุด ซึ่งอาจทำให้เกิดการรั่วซึม



ข้อควรระวัง ความเสี่ยงซึ่งอาจทำให้ได้รับบาดเจ็บหรือผลิตภัณฑ์ชำรุด เปิดน้ำเพื่อทำความสะอาดและขัดเศษต่างๆ ออกจากท่อน้ำดีก่อนประกอบกับวาล์วน้ำเข้า

- ☐ ให้ตรวจสอบสุขภัณฑ์ตัวใหม่ว่าชำรุดหรือไม่
- ☐ ตรวจสอบระบบสุขาภิบาลและกฎหมายควบคุมอาคาร
- ตรวจสอบให้แน่ใจว่า รายการอุปกรณ์ครบถ้วนก่อนเริ่มดำเนินการติดตั้ง

อุปกรณ์ในถุง

- ☐ โบลท์ขนาด 5/16" x 2-1/2" จำนวน 4 ชิ้น
- ☐ พุก 5/16" จำนวน 2 ชิ้น
- ☐ อุปกรณ์ยึดท่อสุขภัณฑ์ 2 ชิ้น
- ☐ ฝาปิด 2 ชิ้น
- ☐ สกรูขนาด 10 x 1-1/2" จำนวน 2 ชิ้น
- ☐ ปลอก จำนวน 2 ชิ้น
- ☐ ซีฟู้ดกันกลิ่น จำนวน 1 ชิ้น
- ☐ หน้าแปลน จำนวน 1 ชิ้น

ชุดอุปกรณ์รีโมทคอนโทรล

- ☐ แท่นชาร์จรีโมทคอนโทรล จำนวน 1 ชิ้น
- ☐ รีโมทคอนโทรล จำนวน 1 ชิ้น
- ☐ สายต่อแท่นชาร์จ จำนวน 1 ชิ้น
- ☐ เสาคอนกรีตวิทยุเอเอ็ม จำนวน 1 ชิ้น
- ☐ สายเสียบอุปกรณ์เสริม (เสียง) จำนวน 1 ชิ้น
- ☐ พุก UX 6 x 35 จำนวน 2 ชิ้น
- ☐ โบลท์ 4.5 x 45 จำนวน 2 ชิ้น


ชิ้นส่วนอื่นๆ

- ☐ คู่มือการดูแลรักษาสุขภัณฑ์
- ☐ คู่มือแนะนำการติดตั้ง
- ☐ คู่มือวิธีการใช้งานฉบับย่อ
- ☐ กระดาษแม่แบบสำหรับการติดตั้ง


ชิ้นส่วนอื่นๆ

- ☐ สายน้ำดี จำนวน 1 ชิ้น
- ☐ คลิป จำนวน 1 ชิ้น
- ☐ หัวแปลงปลั๊กไฟ (สากล)
- ☐ วาล์วเปิด-ปิดน้ำ จำนวน 1 ชิ้น
- ☐ ชุดอุปกรณ์หน้าแปลนยึดท่อสุขภัณฑ์ จำนวน 1 ชิ้น

ขนาดระยะแสดงค่าโดยประมาณ
หน่วย : มม.

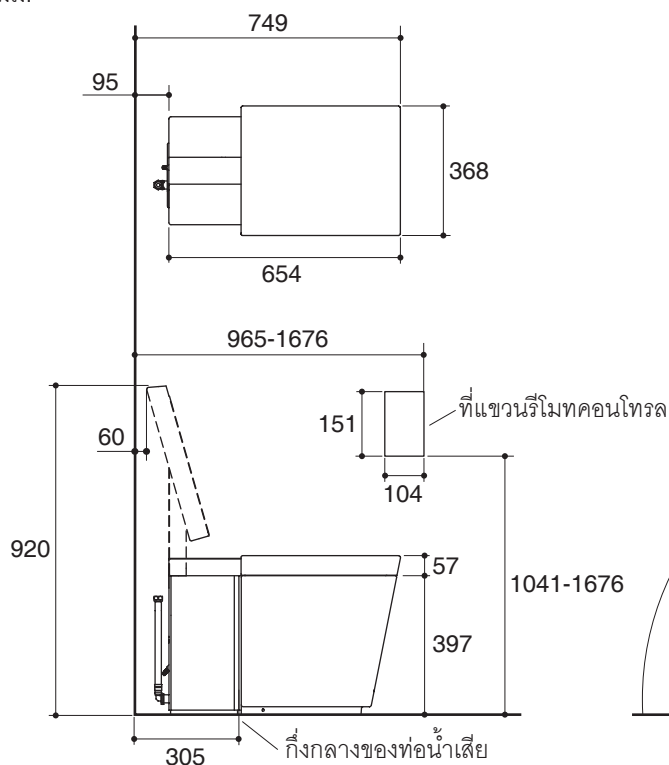

ด้านหน้า
ของโถสุขภัณฑ์

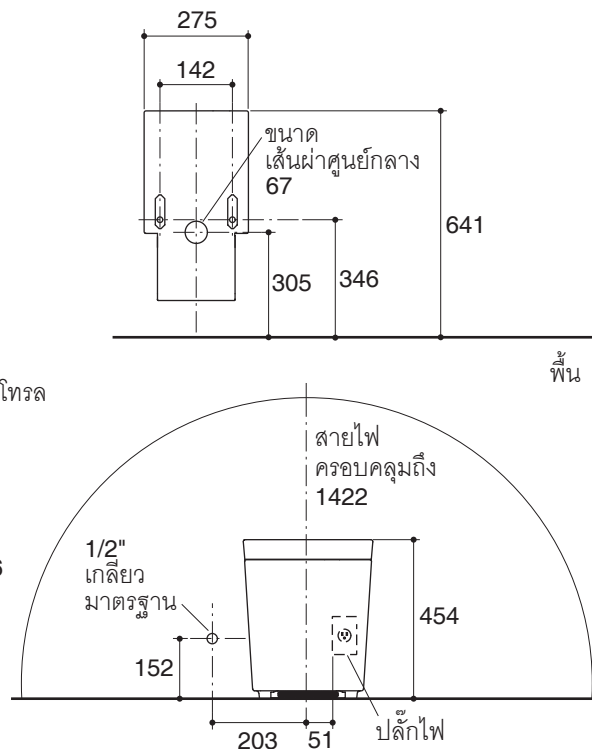


ระยะการติดตั้ง – สำหรับการติดตั้งระบบไฟฟ้าและท่อน้ำดีแบบฝังผนัง

ข้อพึงระวัง ควรติดตั้งวาล์วเปิด-ปิดน้ำ, เต้าเสียบไฟ และสายต่อแท่นชาร์จ ตามระยะการติดตั้งที่แนะนำ ตรวจสอบให้แน่ใจว่าติดตั้งสุขภัณฑ์เหมาะสมกับมาตรฐานที่รองรับ


ข้อพึงระวัง ตำแหน่งติดตั้งวาล์วเปิด-ปิดน้ำที่อยู่ด้านหลังสุขภัณฑ์ อาจทำให้ถอดแผงปิดด้านหลังออกยาก

ข้อสำคัญ! ห้ามติดตั้งวัสดุอุปกรณ์ใดๆ ไว้ข้างหลังโถสุขภัณฑ์ เพราะอาจทำให้ฝารองนั่งไม่ทำงานเมื่อฝารองเปิดขึ้น อุปกรณ์ตกแต่งภายในห้องน้ำต่างๆ ควรมีความสูงมากกว่า 94 ซม. เพื่อเหลือพื้นที่ว่างไว้สำหรับการเปิดฝารองนั่ง


- สายไฟแท่นชาร์จรีโมทคอนโทรลที่มาพร้อมกับสุขภัณฑ์มีความยาว 5 เมตร
- ติดตั้งอุปกรณ์ป้องกันสายไฟฟ้าลัดวงจร GFCI หรือ ELCB โดยระยะห่างจากตัวสุขภัณฑ์ไม่เกิน 1422 มม. เนื่องจากสายไฟมีความยาว 1422 มม.
- สุขภัณฑ์นี้มีเซ็นเซอร์จับสัญญาณเคลื่อนไหวสำหรับการเปิดฝารองนั่งอัตโนมัติเมื่อมีสัญญาณเคลื่อนไหว ซึ่งท่านสามารถปรับระดับค่าระยะสัญญาณเคลื่อนไหวของผู้ใช้งานได้
- สุขภัณฑ์นี้มีเซ็นเซอร์จับสัญญาณเคลื่อนไหวสำหรับการเปิดที่รองนั่งอัตโนมัติเมื่อมีวัตถุเข้าใกล้แสงไฟ ซึ่งแสงไฟจะอยู่ด้านขวาของโถสุขภัณฑ์และมีระยะจับสัญญาณเซ็นเซอร์ประมาณ 20 ซม. โปรดให้บริเวณพื้นที่นี้ปลอดจากวัตถุสิ่งของต่างๆ
- วาล์วเปิด-ปิดน้ำมีเกลียวมาตรฐานขนาด 1/2 นิ้ว หากจำเป็นอาจใช้อะแดปเตอร์แทนได้

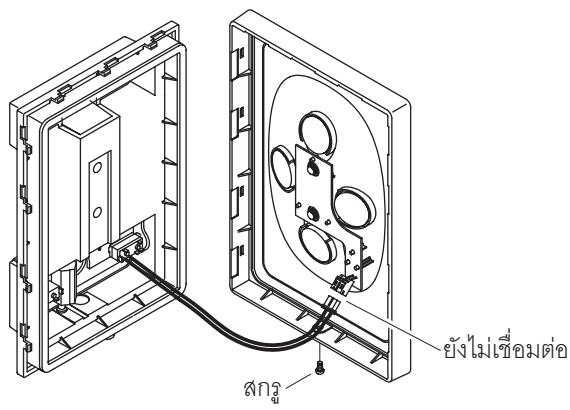


รูปที่ #1

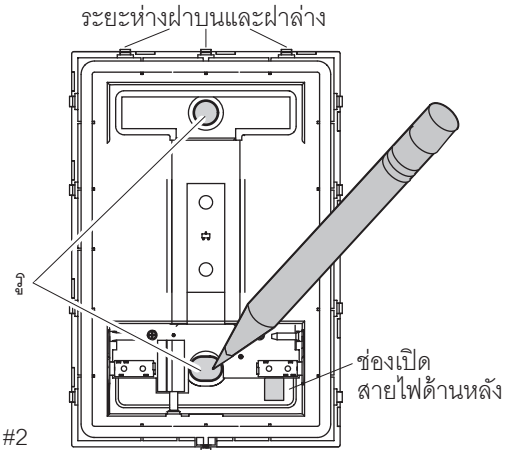

รูปที่ #2

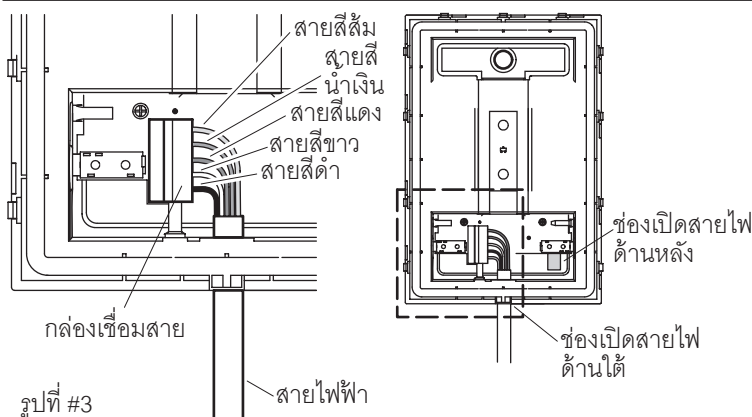

รูปที่ #3

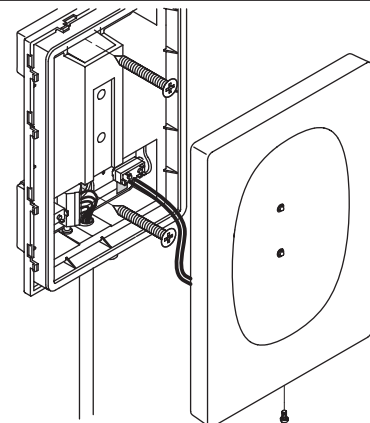


รูปที่ #4

การติดตั้งแท่นชาร์จรีโมทคอนโทรล

ข้อสังเกต สายต่อแท่นชาร์จมีขนาดยาว 5 เมตร พร้อมกับแท่นชาร์จ จัดตำแหน่งที่ติดตั้งแท่นชาร์จเพื่อให้สายต่อแท่นชาร์จเชื่อมต่อถึงตัวสุขภัณฑ์ได้

- แกะกล่องแท่นชาร์จรีโมทคอนโทรล
- ถอดสกรูที่อยู่ใต้แท่นชาร์จรีโมทคอนโทรล
- ค่อยๆ ถอดฝาครอบโดยใช้อุปกรณ์แฉกเข้าไปในช่องตรงกลางระหว่างฝาดบนและฝาดล่าง จากนั้นค่อยๆ ถอดฝาครอบออกกระทั่งฝาดบนและฝาดล่างแยกออกจากกัน (รูปที่ #2)
- ค่อยๆ ดึงฝาครอบออก
- นำสกรูติดเทปไว้กับฝาครอบไว้ก่อน
- สำหรับการติดตั้งแบบฝังผนัง ให้ทำการต่อสายผ่านช่องเปิดด้านหลังของแท่นชาร์จ
- สำหรับการติดตั้งแบบไม่ฝังผนัง ให้ทำการต่อสายผ่านช่องเปิดด้านใต้ของแท่นชาร์จ
- จัดตำแหน่งที่ต้องการติดตั้งแท่นชาร์จและทำเครื่องหมายเพื่อกำหนดตำแหน่งรูของสกรูสำหรับยึดแท่นชาร์จ
- เจาะรูยึดบนผนังสำหรับแขวนแท่นชาร์จ ขนาดของรูขึ้นอยู่กับทุกยึดผนัง, วัสดุผนัง และความเหมาะสมในการติดตั้ง
- คลายสกรูที่เชื่อมต่อสายไฟทั้ง 5 ตัวออก
- สวมสายไฟเข้าแท่นชาร์จผ่านช่องเปิดด้านหลังของแท่นชาร์จสำหรับการติดตั้งแบบฝังผนัง หรือช่องเปิดด้านใต้ของแท่นชาร์จสำหรับการติดตั้งแบบไม่ฝังผนัง
- วางแท่นชาร์จบนตำแหน่งที่ทำการติดตั้ง ใช้สกรู 2 ตัว ติดตั้งแท่นชาร์จบนผนัง
- ตัดปลอกหุ้มสายไฟที่ปลายออก (ประมาณ 2 มม.)
- เชื่อมสายไฟบนแผงไฟตามสีของสายไฟที่กำหนด (รูปที่ #3) ให้ถูกต้อง และขันสกรูให้แน่น จากนั้นประกอบฝาครอบเข้ากับแท่นชาร์จ
- ปิดฝาครอบแท่นชาร์จเข้ากับแท่นชาร์จ
- ลอกเทปกาวที่ติดสกรูบนฝาครอบออก จากนั้นจึงขันสกรูยึดแท่นชาร์จกับฝาครอบแท่นชาร์จให้แน่น


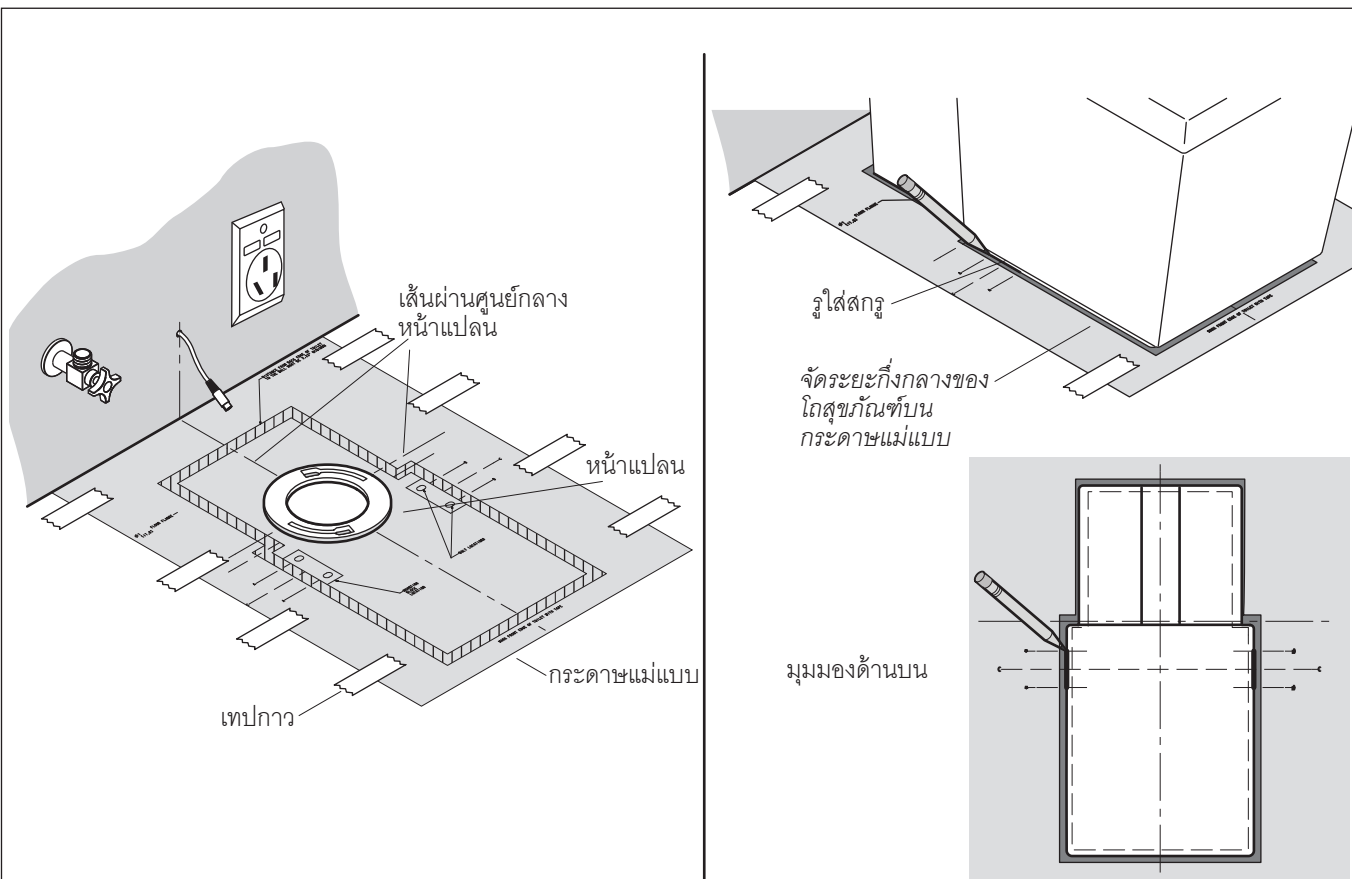


การเตรียมพื้นที่ติดตั้ง

ข้อสำคัญ! ความเสี่ยงซึ่งอาจทำให้เกิดก๊าซรั่ว หากที่โบลท์มีความยาวยื่นออกมาจากหน้าแปลน ให้ถอดออกเนื่องจากไม่จำเป็นต้องใช้ที่โบลท์สำหรับการติดตั้งสุขภัณฑ์นี้

ข้อสำคัญ! สุขภัณฑ์นี้ถูกออกแบบให้มีดีไซน์พิเศษ ความกว้างของขอบรอบฐานโถสุขภัณฑ์จึงแตกต่างกัน ดังนั้นขั้นตอนต่อไปนี้เป็นสำหรับการติดตั้งโถสุขภัณฑ์

- ใช้กรรไกรตัดกระดาดแม่แบบตามรอยเส้นประด้านในของหน้าแปลน
- จัดตำแหน่งกระดาดแม่แบบโดยกำหนดกึ่งกลางของรูหน้าแปลนเป็นสำคัญ เนื่องจากเส้นกึ่งกลางของแม่แบบจะเป็นเส้นกำหนดจุดศูนย์กลางของหน้าแปลน
- ติดกระดาดแม่แบบบนพื้นด้วยเทปขาว
- ตรวจสอบให้มั่นใจว่า วางกระดาดแม่แบบถูกต้องตามตำแหน่งกึ่งกลางบนหน้าแปลน
- วางตำแหน่งสุขภัณฑ์บนกระดาดแม่แบบ ตรวจสอบให้มั่นใจว่า วางตำแหน่งด้านหน้าของโถสุขภัณฑ์ตรงตามกระดาดแม่แบบ
- ตรวจสอบให้มั่นใจว่า จัดตำแหน่งสุขภัณฑ์ข้างซ้ายและข้างขวามบนกระดาดแม่แบบให้มีระยะห่างจากเส้นทึบเท่าๆกัน
- กำหนดตำแหน่งรูเจาะของสกรูทั้งสองข้างของโถสุขภัณฑ์บนพื้น โดยกำหนดตำแหน่งขอบใต้โถสุขภัณฑ์ให้ถูกต้อง ตำแหน่งที่ถูกกำหนดจะตรงตามเส้นตำแหน่ง "C" และตำแหน่ง "A" หรือตำแหน่ง "B" ที่ระบุไว้บนกระดาดแม่แบบ

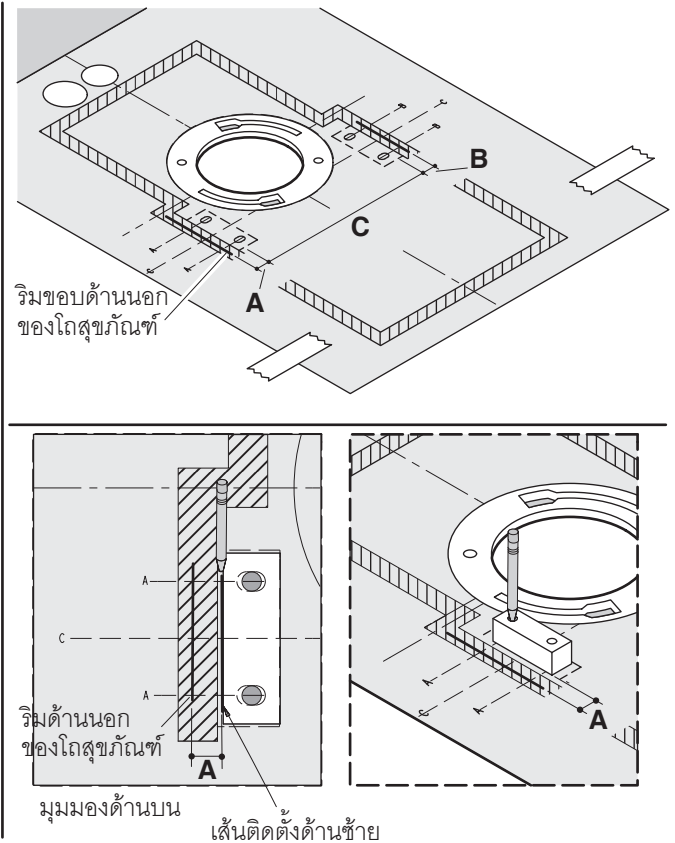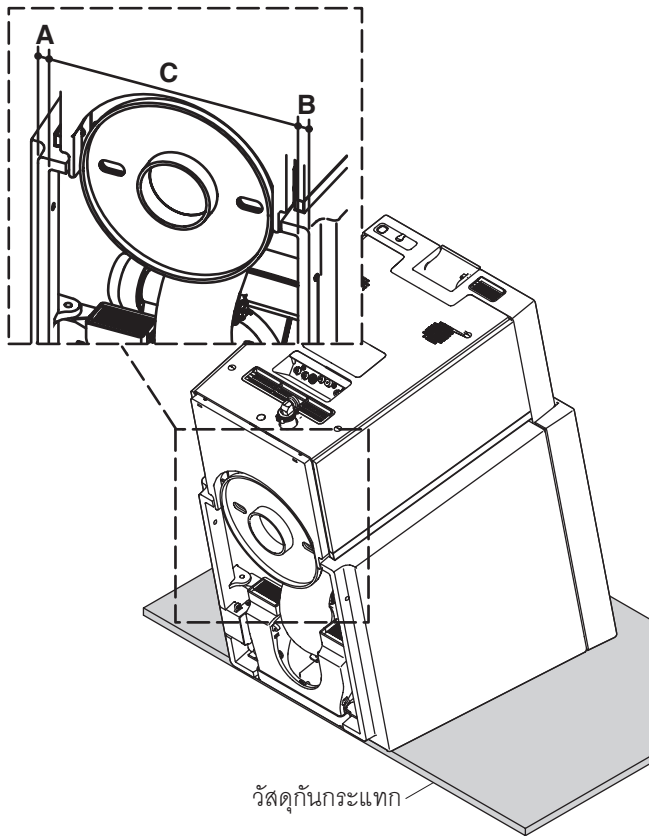

กำหนดตำแหน่งอุปกรณ์ยึดโถสุขภัณฑ์

หมายเหตุ สุขภัณฑ์นี้มีวัสดุป้องกันการแช่แข็งที่เป็นมิตรกับสิ่งแวดล้อมอยู่ในถังพักน้ำ เพื่อป้องกันการแช่แข็งในระหว่างการขนส่ง เมื่อเอียงสุขภัณฑ์มาด้านหน้าอาจมีวัสดุป้องกันการแช่แข็งไหลลงบนพื้นได้ ให้มั่นใจว่า มีวัสดุรองรับบนพื้นไว้เรียบร้อยแล้ว

- จัดวางตำแหน่งกล่องกระดาษหรือวัสดุกันกระแทกบนพื้นเพื่อรองรับด้านหน้าของโถสุขภัณฑ์
- ค่อยๆเอียงสุขภัณฑ์มาทางด้านหน้ากระทั่งด้านหน้าโถสุขภัณฑ์คว่ำลงบนพื้น

หมายเหตุ ตำแหน่งการติดตั้งอุปกรณ์ยึดโถสุขภัณฑ์ถูกระบุอยู่บนกระดาษแม่แบบ เนื่องจากความกว้างของฐานโถสุขภัณฑ์อาจมีความแตกต่างกัน ผู้ติดตั้งจะต้องระบุตำแหน่งติดตั้งอุปกรณ์ยึดโถสุขภัณฑ์ให้ถูกต้อง


- วัดขนาดความกว้างของฐานโถสุขภัณฑ์ ระยะ “A” ที่ตำแหน่งซ้ายของสุขภัณฑ์
- จากตำแหน่งที่ระบุขอบด้านนอกของฐานสุขภัณฑ์ ให้วัดเข้ามาและทำเครื่องหมายระยะ “A” ตามเส้นกำหนดระยะ “A” ในกระดาษแม่แบบ
- วาดเส้นเชื่อมต่อระยะ “A” แต่ละเส้น
- วัดขนาดความกว้างของฐานโถสุขภัณฑ์ในตำแหน่ง “B” ที่ตำแหน่งขวาของสุขภัณฑ์
- จากตำแหน่งที่ระบุขอบด้านนอกของฐานสุขภัณฑ์ ให้วัดเข้ามาและทำเครื่องหมายระยะ “B” ตามเส้นกำหนดระยะ “B” ในกระดาษแม่แบบ
- วาดเส้นเชื่อมต่อที่ระบุ “B” แต่ละเส้น

ข้อสำคัญ! ค่า “C” เป็นค่าระยะห่างระหว่างขอบด้านในของฐานสุขภัณฑ์จากซ้ายถึงขวา ซึ่งระยะห่างจากขอบด้านนอกของอุปกรณ์ยึดโถสุขภัณฑ์ควรจะมีค่าไม่น้อยกว่าตำแหน่ง “C” ส่วนระยะห่างระหว่างขอบด้านนอกและขอบด้านในของอุปกรณ์ยึดโถสุขภัณฑ์มีค่า 2 มม. หรือน้อยกว่านั้น ซึ่งอุปกรณ์ยึดโถสุขภัณฑ์จะมีความยืดหยุ่นพอสมควรสำหรับการติดตั้ง

- วัดระยะค่า “C” บนกระดาษแม่แบบ โดยเริ่มวัดจากเส้นด้านใน
- จัดตำแหน่งอุปกรณ์ยึดโถสุขภัณฑ์ที่ติดตั้งที่ระบุไว้บนด้านซ้ายของกระดาษแม่แบบ โดยจัดตำแหน่งขอบด้านนอกของอุปกรณ์ยึดโถสุขภัณฑ์ให้ชิดเส้นด้านใน จากนั้นเลื่อนเข้ามาด้านในอีก 2 มม.


กำหนดตำแหน่งอุปกรณ์ยึดโถสุขภัณฑ์ (ต่อ)

- หลังจากการจัดตำแหน่งอุปกรณ์ยึดโถสุขภัณฑ์ ให้สอดดินสอเข้าไปในรูของอุปกรณ์ยึดโถสุขภัณฑ์เพื่อทำเครื่องหมายกึ่งกลางของรูเจาะ
- นำอุปกรณ์ยึดโถสุขภัณฑ์ออกจากตำแหน่ง
- จัดตำแหน่งอุปกรณ์ยึดโถสุขภัณฑ์ที่ติดตั้งที่ระบุไว้บนด้านขวาของกระดาดแม่แบบ โดยจัดตำแหน่งขอบด้านนอกของอุปกรณ์ยึดโถสุขภัณฑ์ให้ชิดเส้นด้านใน จากนั้นเลื่อนเข้ามาด้านในอีก 2 มม.
- หลังจากการจัดตำแหน่งอุปกรณ์ยึดโถสุขภัณฑ์ ให้สอดดินสอเข้าไปในรูอุปกรณ์ยึดโถสุขภัณฑ์เพื่อทำเครื่องหมายกึ่งกลางของรูเจาะ
- กำหนดกึ่งกลางของช่องสลักตบบนกระดาดแม่แบบ และใช้ดินสอระบุตำแหน่งของรูเจาะให้ตรงกัน หากใช้ฟุกให้เจาะรูขนาด 13 มม.
- ถ้าหากจำเป็นต้องใช้ฟุก ให้สวมฟุกที่มาพร้อมกับสุขภัณฑ์ลงไปในรูเจาะ
- นำกระดาดแม่แบบออก

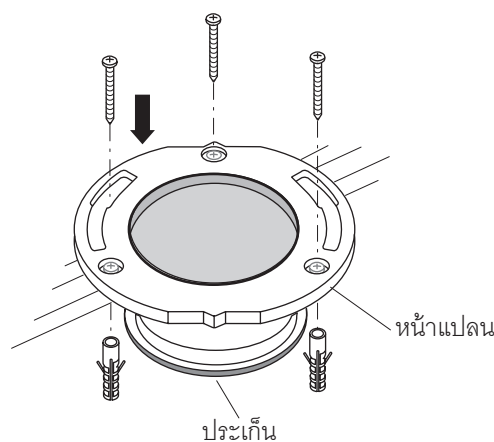

การติดตั้งชุดหน้าแปลน

- วางหน้าแปลนบนพื้น กำหนดรูเจาะฟุกบนพื้นด้วยดินสอ
- เจาะรูฟุก 10 มม และจึงสวมฟุก
- วางประเก็นไว้ด้านล่างหน้าแปลน จัดตำแหน่งหน้าแปลนบนพื้น
- ชันสกรูยึดให้แน่น

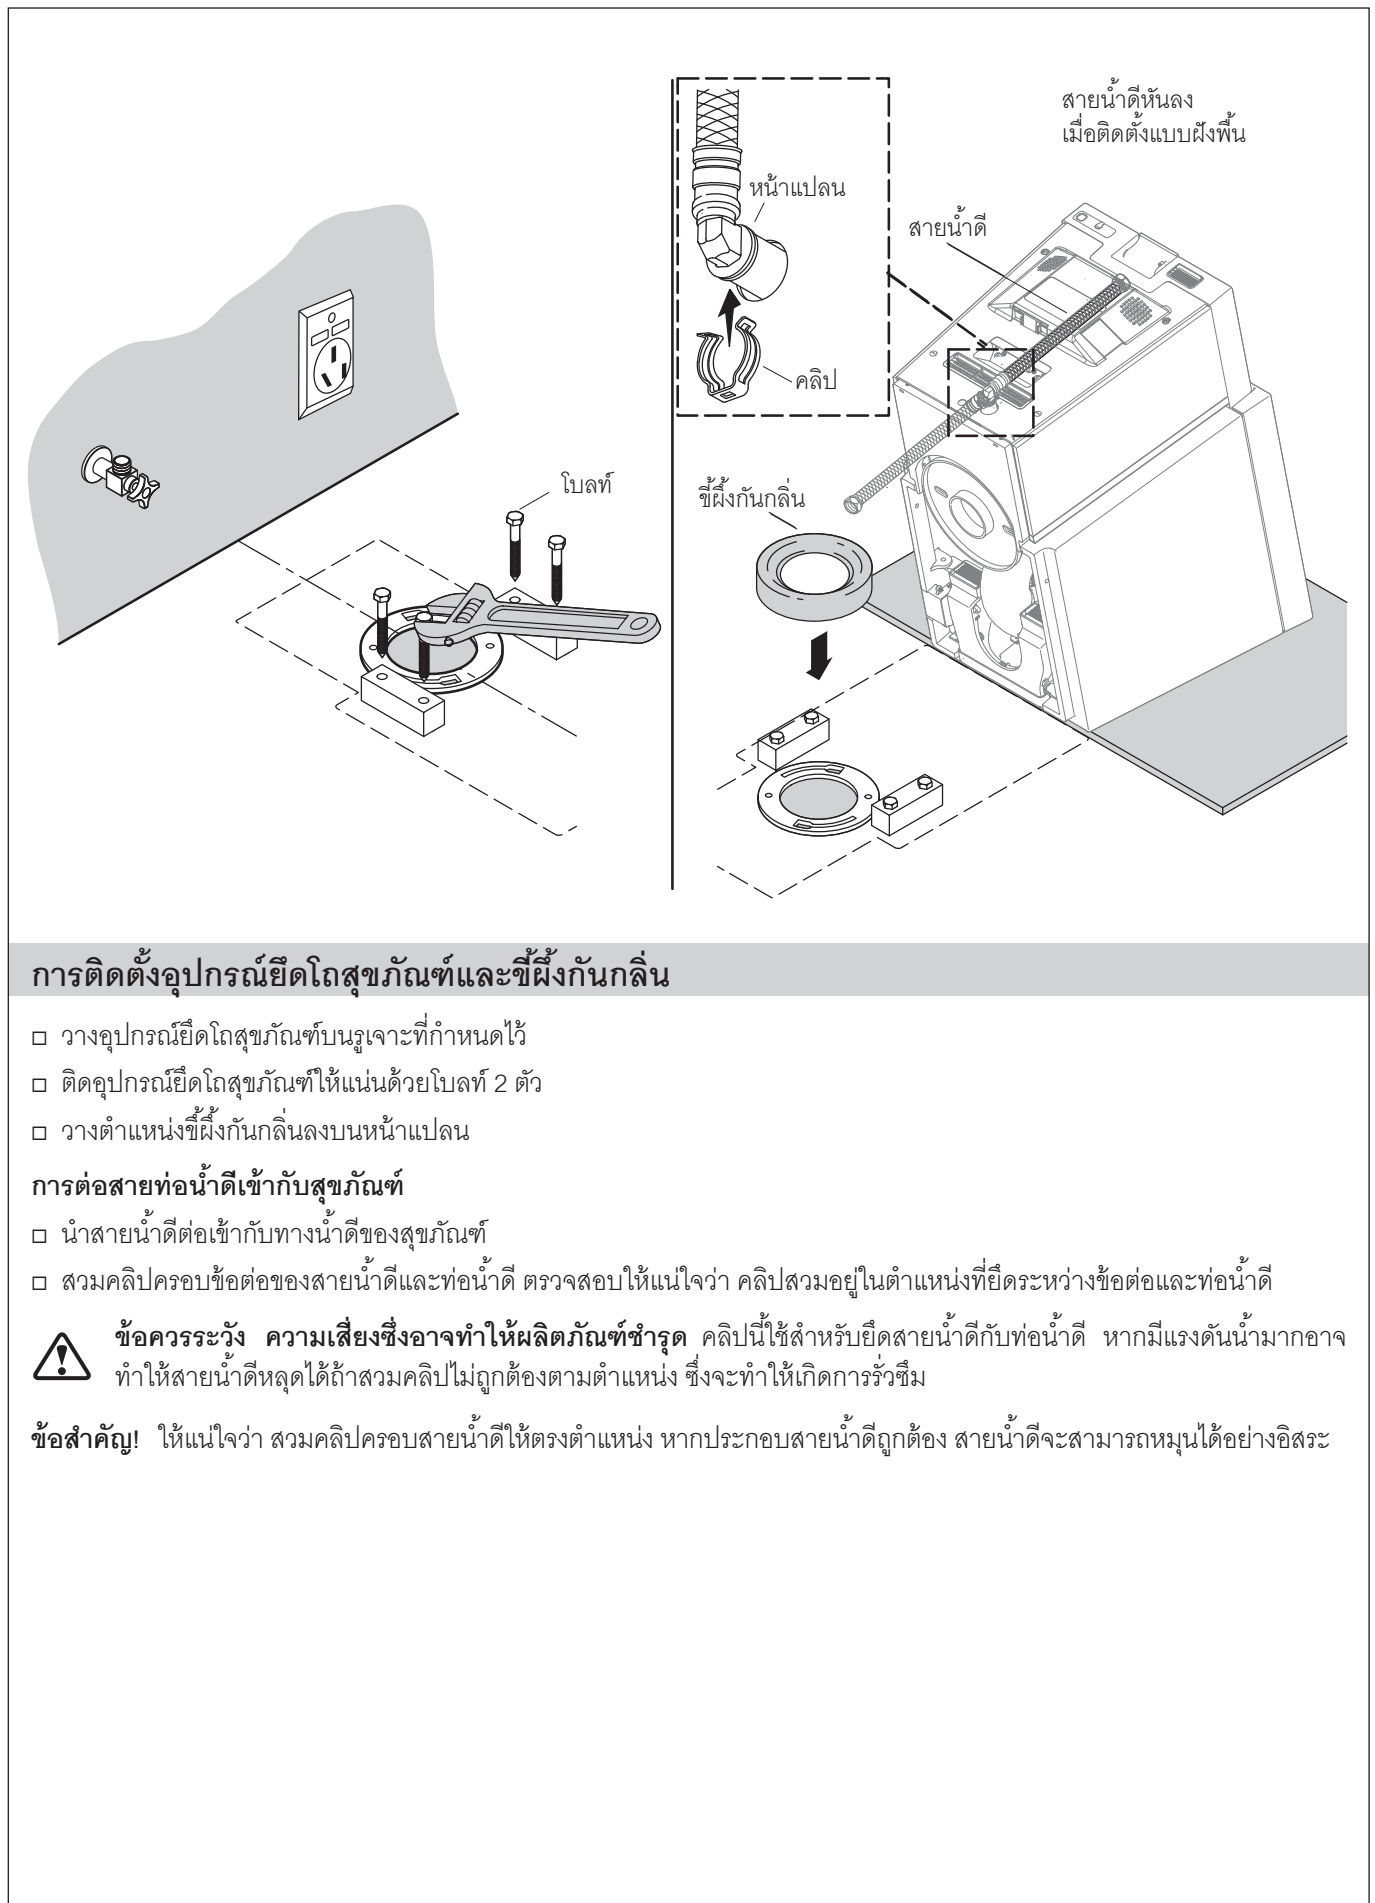

การติดตั้งอุปกรณ์ยึดโถสุขภัณฑ์และซีฟู้กักกั้น

- วางอุปกรณ์ยึดโถสุขภัณฑ์บนรูเจาะที่กำหนดไว้
- ติดอุปกรณ์ยึดโถสุขภัณฑ์ให้แน่นด้วยbolt 2 ตัว
- วางตำแหน่งซีฟู้กักกั้นลงบนหน้าแปลน


การต่อสายท่อน้ำดีเข้ากับสุขภัณฑ์

- นำสายน้ำดีต่อเข้ากับทางน้ำดีของสุขภัณฑ์
- สวมคลิปครอบข้อต่อของสายน้ำดีและท่อน้ำดี ตรวจสอบให้แน่ใจว่า คลิปสวมอยู่ในตำแหน่งที่ยึดระหว่างข้อต่อและท่อน้ำดี



ข้อควรระวัง ความเสี่ยงซึ่งอาจทำให้เกิดอุบัติเหตุ คลิปนี้ใช้สำหรับยึดสายน้ำดีกับท่อน้ำดี หากมีแรงดันน้ำมากอาจทำให้สายน้ำดีหลุดได้ถ้าสวมคลิปไม่ถูกต้องตามตำแหน่ง ซึ่งจะก่อให้เกิดการรั่วซึม

ข้อสำคัญ! ให้แน่ใจว่า สวมคลิปครอบสายน้ำดีให้ตรงตำแหน่ง หากประกอบสายน้ำดีถูกต้อง สายน้ำดีจะสามารถหมุนได้อย่างอิสระ

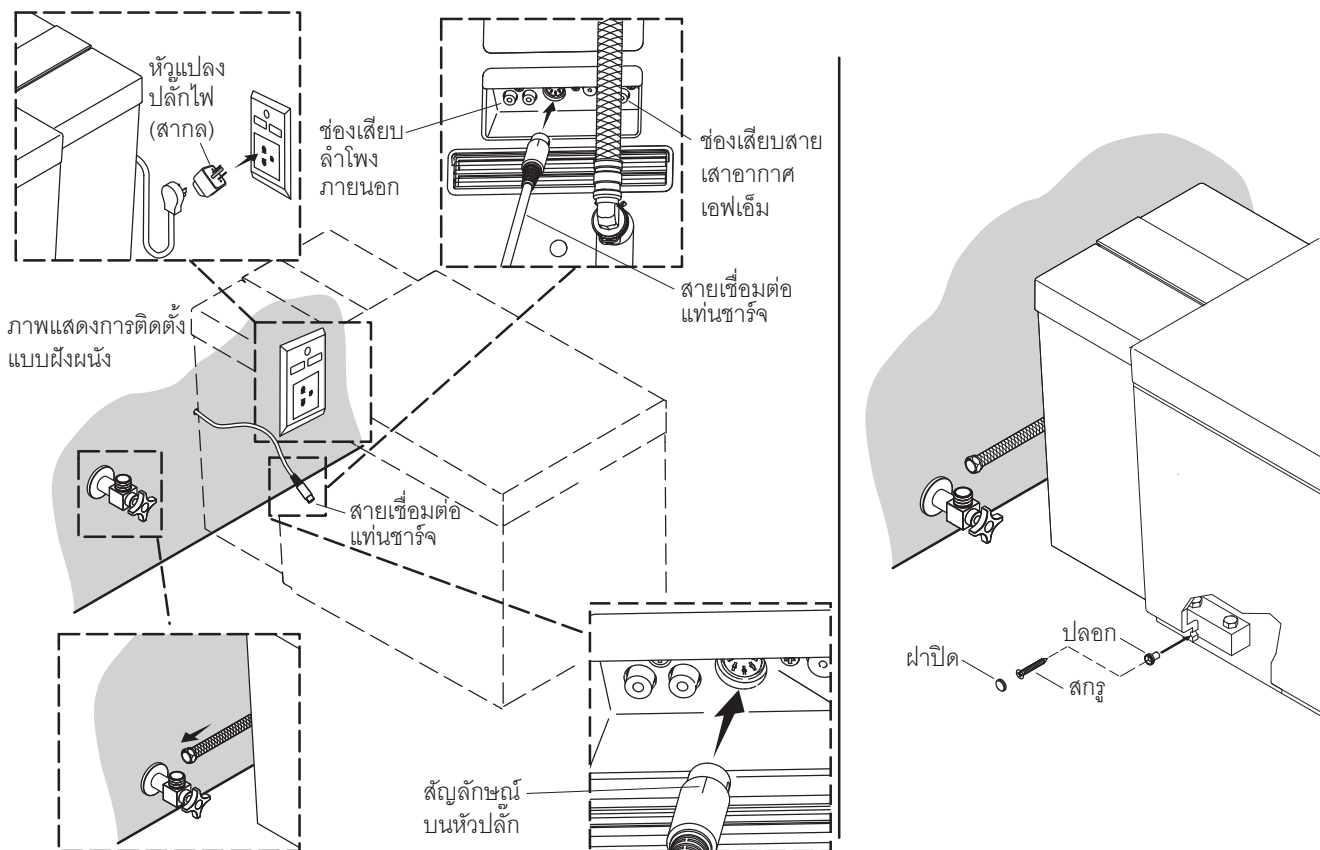

การติดตั้งสุขภัณฑ์

การจัดวางสุขภัณฑ์

- ค่อยๆ วางสุขภัณฑ์ลงบนพื้น ให้แน่ใจว่า เมื่อวางสุขภัณฑ์ ทางน้ำดีและสายไฟไม่ทับหรือพันกัน
- ต่อสายน้ำดีเข้ากับวาล์วเปิด-ปิดน้ำ
- ประกอบสายแทนชาร์จโดยเสียบสายตามสัญลักษณ์บนหัวปลั๊ก
- ต่อเส้าอากาศวิทยุเอฟเอ็ม (ไม่ได้แสดงไว้บนภาพ) เข้ากับสุขภัณฑ์หากต้องการติดตั้งวิทยุเอฟเอ็ม โดยปกติไม่จำเป็นต้องใช้เส้าอากาศวิทยุเอฟเอ็มภายนอกเนื่องจากการติดตั้งเส้าอากาศภายในตัวสุขภัณฑ์ไว้เรียบร้อยแล้ว อย่างไรก็ตามหากสภาพแวดล้อมไม่เอื้ออำนวยต่อการรับสัญญาณ ให้ติดเส้าอากาศวิทยุเอฟเอ็มจากภายนอกและยกเส้าอากาศขึ้น
- ต่อสายลำโพงภายนอกเข้ากับปลั๊ก (RCA) (ไม่ได้แสดงไว้บนภาพ) เข้ากับสุขภัณฑ์ หากต้องการติดตั้งลำโพงจากภายนอก
- วางรีโมทคอนโทรลไว้บนแทนชาร์จ
- เสียบปลั๊กไฟพร้อมกับหัวแปลงปลั๊กไฟ (สากล)
- เปิดวาล์วน้ำ

ตรวจสอบการรั่วซึม

ข้อสังเกต เมื่อเสียบปลั๊กไฟครั้งแรก สุขภัณฑ์จะเข้าสู่ระบบเริ่มการทำงานโดยอัตโนมัติ ขั้นตอนนี้อาจใช้เวลาสักครู่เพื่อเปิดการทำงาน

ข้อสังเกต หากระบบเริ่มต้นการทำงานไม่ทำงาน ให้ปฏิบัติตามขั้นตอนบนรีโมทคอนโทรล

- เมื่อระบบเริ่มการทำงานเสร็จสิ้น ให้ทำการชำระล้างสุขภัณฑ์โดยกดปุ่มแมนนวลที่ด้านข้างโถสุขภัณฑ์
- เมื่อน้ำเต็มเข้าสุขภัณฑ์แล้ว จากนั้นจึงตรวจสอบการรั่วซึม


การติดตั้งสุขภัณฑ์ (ต่อ)

การยึดโถสุขภัณฑ์

- สวมปลอกเข้าไปในรูสกรูที่อยู่ด้านข้างโถสุขภัณฑ์
- สวมสกรูเข้าไปในรูสกรูทั้งสอง


ข้อสังเกต ไขควงลมเป็นอุปกรณ์ที่เหมาะสมที่สุดในการขันสกรู เนื่องจากพื้นที่ติดตั้งแคบและชิดกับพื้นมาก หากใช้ไขควงทั่วไปจะทำให้ขันสกรูได้ยาก และมีความเสี่ยงที่อาจทำให้สุขภัณฑ์เกิดรอยขีดข่วนจากการติดตั้ง

- สวมสกรูเข้าไปในอุปกรณ์ยึดโถสุขภัณฑ์ และขันสกรูให้แน่นพอที่จะจัดตำแหน่งสุขภัณฑ์ให้ถูกต้องตามตำแหน่ง
- สวมฝาครอบเข้าไปในรูสกรู

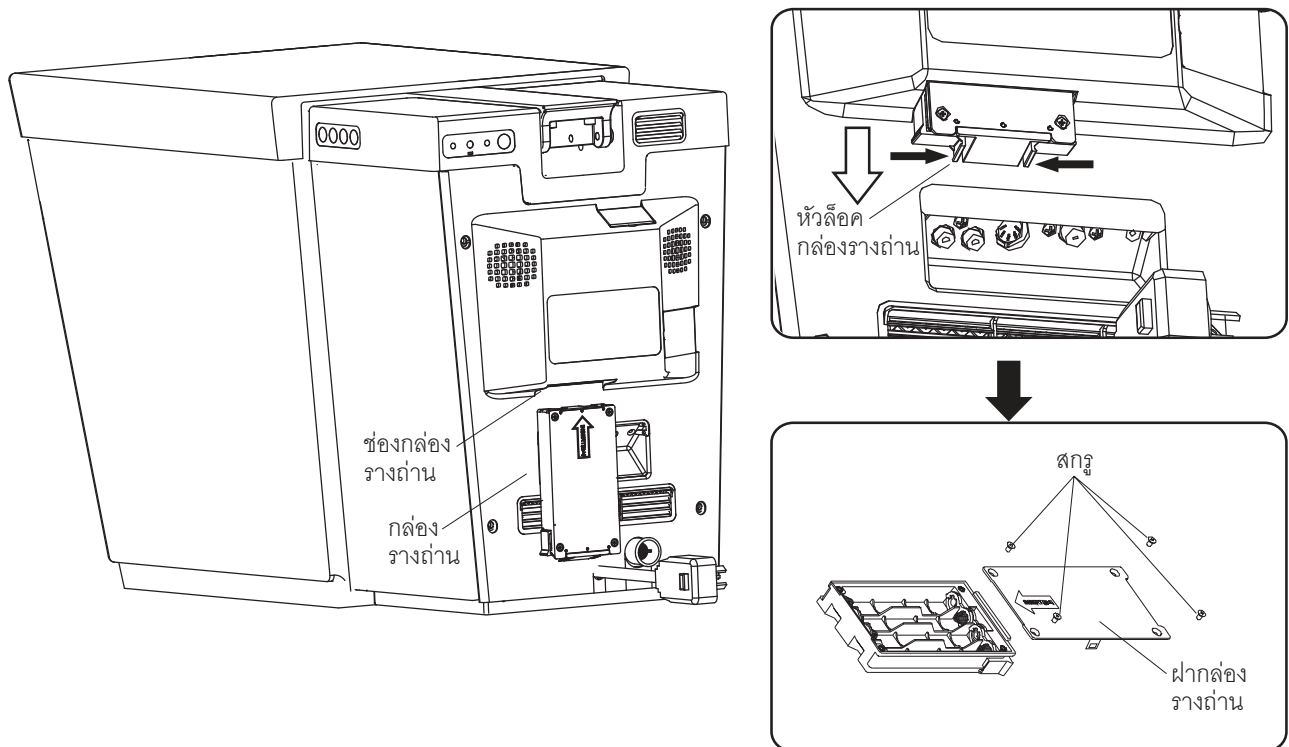

การติดตั้งกล่องรางถ่าน

- ดึงสายไฟออกจากด้านใต้กล่องรางถ่าน
- บีบหัวลิ้นคและดึงลง เพื่อนำกล่องรางถ่านออกจากฝาครอบด้านหลัง
- คลายสกรูออก จากนั้นนำฝากล่องรางถ่านออก
- ใส่ถ่าน AA จำนวน 8 ก้อน ตามสัญลักษณ์บนกล่องรางถ่าน
- ขันสกรูกล่องรางถ่านให้แน่น
- ใส่กล่องรางถ่านเข้ากับช่องกล่องรางถ่านตามสัญลักษณ์บนกล่องรางถ่าน ดันกล่องรางถ่านเข้าไปจนกระทั่งหัวลิ้นค

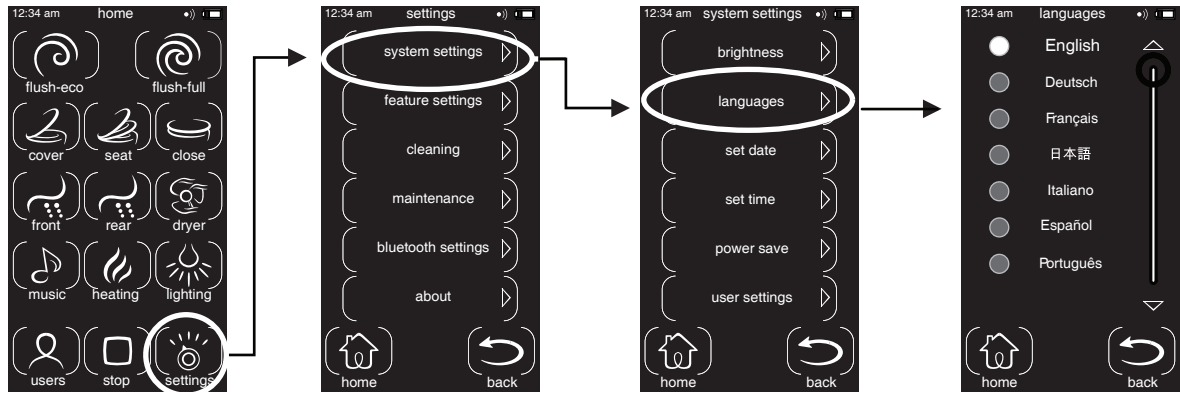

การตั้งค่ารีโมทคอนโทรล – ตั้งค่าภาษา

ข้อสังเกต หากนำรีโมทคอนโทรลออกจากแท่นชาร์จขณะที่ยังชาร์จแบตเตอรี่ไม่เต็มที ให้ปฏิบัติตามขั้นตอนดังนี้ พร้อมกับติดรีโมทคอนโทรลไว้กับแท่นชาร์จ


ข้อสังเกต ภาษาจีนเป็นค่าที่ถูกติดตั้งมาจากโรงงาน ให้ข้ามขั้นตอนนี้หากเลือกใช้งานเป็นภาษาจีน

การเปลี่ยนภาษาบนหน้าจอ

- เลือกคำสั่ง การตั้งค่า [settings]
- เลือกคำสั่ง การตั้งค่าระบบ [system settings]
- เลือกคำสั่ง ภาษา [languages]

ข้อสังเกต ถ้าภาษาที่ท่านเลือกไว้ไม่ปรากฏบนหน้าจอ ให้เลื่อนปุ่มคำสั่งลงเพื่อเลือกภาษาอื่นเพิ่มเติม

- เลือกปุ่มคำสั่งภาษาตามที่ท่านต้องการใช้งาน จากนั้นสัญลักษณ์บนหน้าจอจะเปลี่ยนภาษาที่ต้องการทันที
- เลือกคำสั่ง **กลับสู่หน้าจอหลัก** [home] เพื่อกลับไปสู่หน้าจอหลัก หรือเลือกคำสั่ง **ย้อนกลับ** [back] เพื่อกลับไปยังหน้าจอก่อนหน้านี้

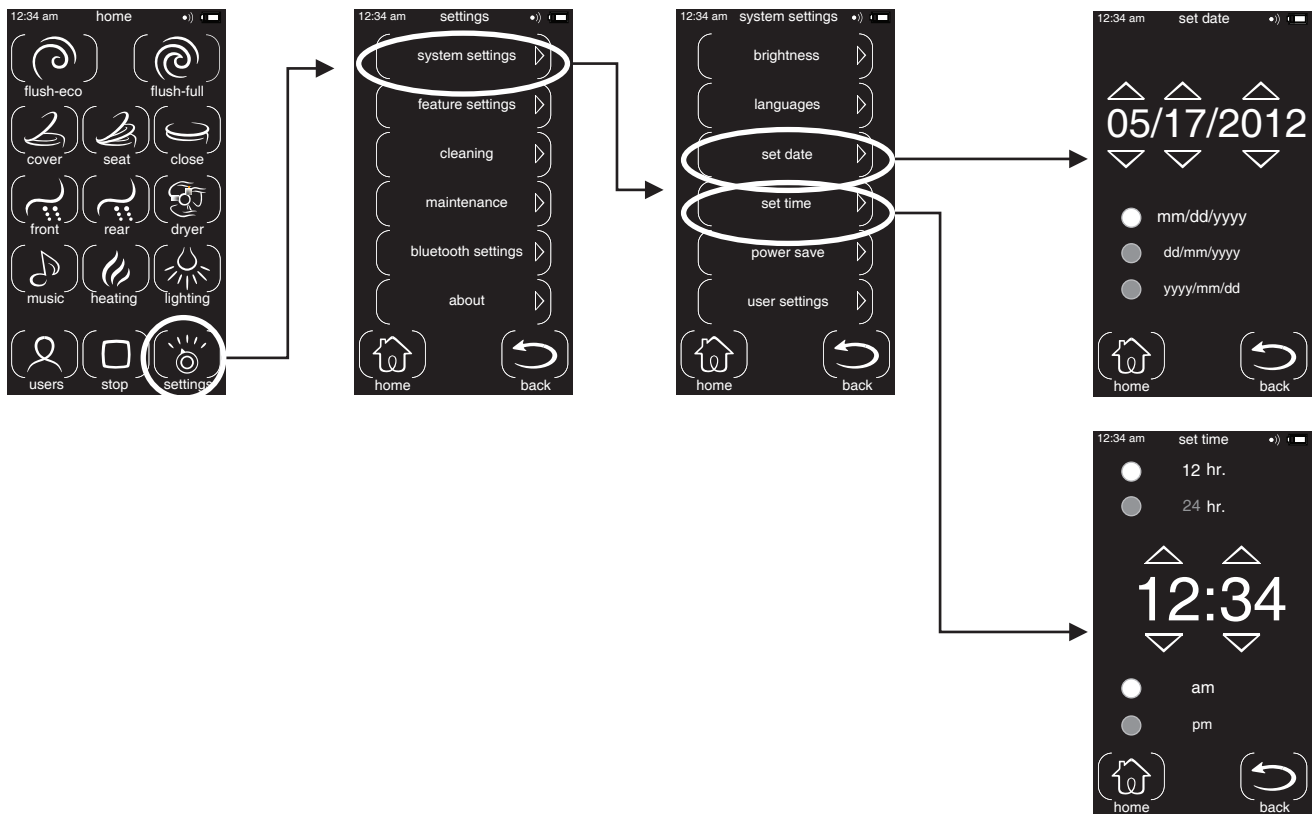


การตั้งค่ารีโมทคอนโทรล – ตั้งค่าวันที่และเวลา

ตั้งค่าวันที่

- เลือกคำสั่ง การตั้งค่า [setting]
- เลือกคำสั่ง การตั้งค่าระบบ [system setting]
- เลือกคำสั่ง ตั้งค่าวันที่ [set date]
- ใช้ลูกศรขึ้นและลงเพื่อปรับเปลี่ยนค่า วัน, เดือน และปี
- เลื่อนปุ่มแถบด้านข้างเพื่อกำหนดรูปแบบวันที่
- เลือกคำสั่ง กลับสู่หน้าจอหลัก [home] เพื่อกลับไปสู่หน้าจอหลัก หรือเลือกคำสั่ง ย้อนกลับ [back] เพื่อกลับไปยังหน้าจอก่อนหน้านี้

ตั้งค่าเวลา

- เลือกคำสั่ง การตั้งค่า [setting]
- เลือกคำสั่ง การตั้งค่าระบบ [system setting]
- เลือกคำสั่ง ตั้งค่าวันที่ [set date]
- กดปุ่มเพื่อเลือกคำสั่ง 12 ชม. [12 hr.] หรือ 24 ชม. [24 hr.]
- ใช้ลูกศรขึ้นและลงเพื่อปรับเปลี่ยนค่าชั่วโมงและนาที
- กดปุ่มเพื่อเลือกช่วงเวลา เช้า [am] หรือ เย็น [pm] (ในกรณีที่ตั้งค่าเป็นแบบ 12 ชม. [12 hr.]
- เลือกคำสั่ง กลับสู่หน้าจอหลัก [home] เพื่อกลับไปสู่หน้าจอหลัก หรือเลือกคำสั่ง ย้อนกลับ [back] เพื่อกลับไปยังหน้าจอก่อนหน้านี้

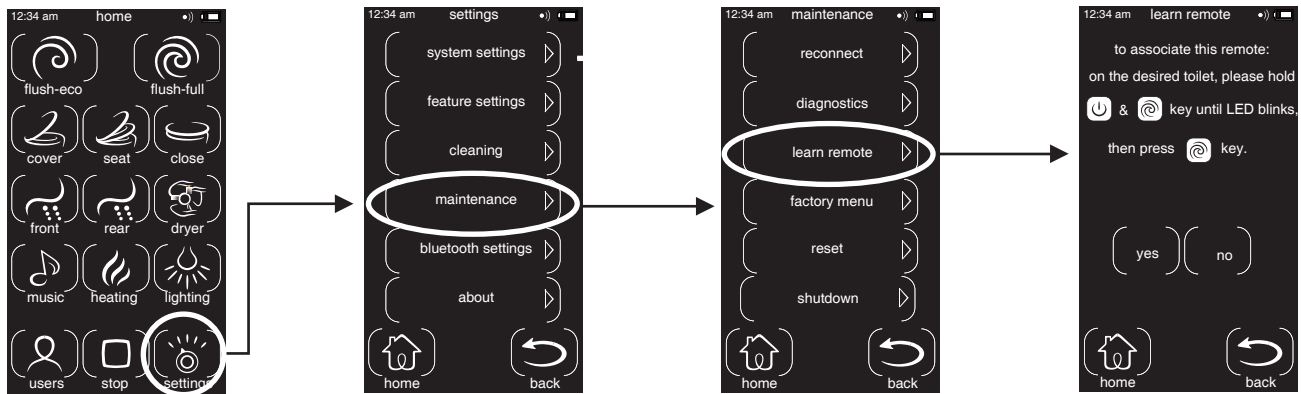

การตั้งค่ารีโมทคอนโทรล – การเชื่อมต่อรีโมทคอนโทรล

ข้อสังเกต การตั้งค่านี้ใช้สำหรับการตั้งค่ารีโมทคอนโทรลชุดใหม่หรือรีโมทคอนโทรลชุดที่สอง

- เลือกคำสั่ง การตั้งค่า [settings]
- เลือกคำสั่ง การบำรุงรักษา [maintenance]
- เลือกคำสั่ง รู้จักกับรีโมทคอนโทรล [learn remote]
- ปฏิบัติตามคำแนะนำที่แสดงบนหน้าจอรีโมทคอนโทรล เมื่อปฏิบัติตามคำสั่งทุกขั้นตอนเรียบร้อยแล้วให้เลือกคำสั่ง ใช่ [yes]



การติดตั้งเสร็จสมบูรณ์

- กดปุ่มชำระล้างบนรีโมทคอนโทรล เพื่อให้แน่ใจว่า สุขภัณฑ์ชำระล้างได้อย่างสมบูรณ์
- นำฟิล์มป้องกันรอยออกจากสุขภัณฑ์และรีโมทคอนโทรล
- ยาชิลิโคนได้ฐานสุขภัณฑ์โดยรอบ และปฏิบัติตามคำแนะนำการใช้งานชิลิโคนจากผู้ผลิต



KOHLER (THAILAND) PUBLIC COMPANY LIMITED

16th FL. Jasmine City Bldg., 2 Soi Sukhumvit 23, Sukhumvit Road, Wattana, Bangkok 10110 Thailand
Call Center Tel. +(66) 2204 6222 Fax. +(66) 2204 6224

บริษัท โคห์เลอร์ (ประเทศไทย) จำกัด (มหาชน)

ชั้น 16 อาคารจัสมีน ซิตี้, 2 ซอยสุขุมวิท 23 ถนนสุขุมวิท แขวงคลองเตยเหนือ เขตวัฒนา กรุงเทพฯ 10110
ลูกค้าสัมพันธ์ โทร. 0 2204 6222 โทรสาร 0 2204 6224

E-mail: callcenterthailand@kohler.com

